

MEIKO[®] ACTIVE

Entkalker flüssig

Scale remover, highly concentrated, acidic



- Removes limescale build-up and encrustation
- Prevents loss of heat due to limescale on elements
- Fast, powerful action
- Ensures dishwashing machines and other appliances can work properly and maintain their value
- Free from hydrochloric acid and chlorides

Instructions for use:

MEIKO ACTIVE liquid scale remover is manually dosed.

Recommended dosing depends on usage**To descale a dishwashing machine:**

70–350 ml / 10 l water at 50–60 °C for 20 min application time, run machine. Remove dishes in advance and switch off detergent dosing. Refill after descaling, drain water and rinse thoroughly, reactivate detergent dosing.

To descale a coffee machine:

7–35 ml / 1 l water at 50–60 °C for 20 min application time, after machine descaling, rinse several times with clean water.

Descaling in soak:

7–35 ml / 1 l water at 50–60 °C for max. 60 min application time, rinse descaled parts several times with clean water.

Depending on the type and level of limescale build-up, increase dosing and repeat the process. If appropriate, a brush can be used to aid in scale removal.

pH value (undiluted)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	---	----	----	----	----	----

Composition and Detergents Regulation information

Please see safety data sheet.

Storage conditions

Store separately from alkalis. Store between 0 and 40 °C.

Safety notice

For professional use only. For further information and safety notices, see product label and safety data sheet.



For safety advice please visit:
<https://m3o.link/A1G>

Sales unit

Canister 5 l



UFI: 6XQR-CJ05-32MK-W3AN

