

# FV 40.2

Dish- and glasswashing machine


# FV 40.2 G

Glasswashing machine

# FV 60.2

Dish- and containerwashing machine

# Original operating instructions

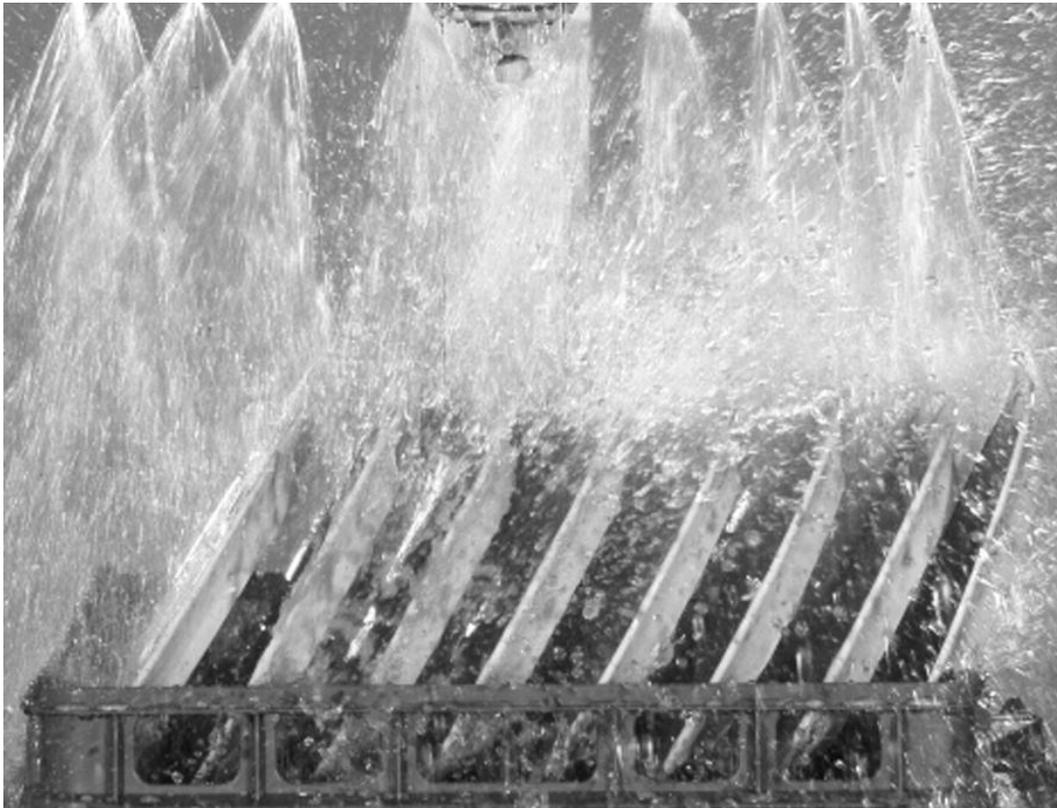

**Read operating instructions before using the machine!**



# **Contents**

|      | <b><u>Page</u></b> |
|------|--------------------|
| 1    | 4                  |
| 1.1  | 5                  |
| 1.2  | 5                  |
| 1.3  | 5                  |
| 1.4  | 5                  |
| 2    | 5                  |
| 3    | 5                  |
| 4    | 6                  |
| 5    | 7                  |
| 5.1  | 7                  |
| 5.2  | 8                  |
| 6    | 10                 |
| 6.1  | 10                 |
| 6.2  | 10                 |
| 6.3  | 11                 |
| 6.4  | 11                 |
| 6.5  | 12                 |
| 6.6  | 12                 |
| 6.7  | 13                 |
| 6.8  | 13                 |
| 7    | 13                 |
| 7.1  | 13                 |
| 8    | 14                 |
| 8.1  | 14                 |
| 8.2  | 15                 |
| 8.3  | 15                 |
| 8.4  | 15                 |
| 9    | 16                 |
| 10   | 16                 |
| 10.1 | 16                 |
| 10.2 | 17                 |
| 10.3 | 17                 |
| 10.4 | 17                 |
| 10.5 | 18                 |
| 10.6 | 18                 |
| 10.7 | 18                 |
| 11   | 19                 |
| 11.1 | 19                 |
| 11.2 | 19                 |
| 11.3 | 19                 |
| 11.4 | 19                 |
| 11.5 | 20                 |
| 12   | 20                 |
| 12.1 | 20                 |
| 12.2 | 23                 |
| 12.3 | 23                 |
| 12.4 | 23                 |
| 13   | 23                 |
| 14   | 24                 |
| 15   | 25                 |

|      |   |    |
|------|---|----|
| 16   | Authorized user of this documentation         | 25 |
| 17   | Settings / modifications / on-site adaptation | 26 |
| 17.1 | Using the keyboard for programming            | 26 |
| 17.2 | Code entry                                    | 26 |
| 17.3 | Service level                                 | 27 |
| 17.4 | Parameter list                                | 32 |
| 17.5 | Assignment list View inputs / control outputs | 36 |
| 17.6 | Rinse program parameter update: 01.05.2008    | 37 |
| 18   | Operating errors                              | 37 |
| 18.1 | Information reporting and troubleshooting     | 38 |
| 18.2 | Error messages and troubleshooting            | 39 |
| 19   | Maintenance                                   | 41 |
| 19.1 | Basic safety measures during normal operation | 41 |
| 19.2 | Dosing units                                  | 42 |
| 19.3 | Maintenance plan                              | 43 |
| 20   | Dismantling and disposal                      | 45 |
| 20.1 | Disposal of packaging materials               | 45 |
| 20.2 | Dismantling and disposal of the old device    | 45 |
| 21   | Documentation                                 | 45 |

# 1 Introduction and general information

Dear Customer,

We are delighted about the confidence you have shown in our products.

It is very important to us that you should obtain significant use from MEIKO products and that they should make your work easier.

If you follow the instructions in this document carefully, your dishwashing machine will always give you total satisfaction and will have a long service life.

The cleaning and disinfection machine has been assembled by us at the factory and has undergone a thorough inspection. This provides us with the certainty and you with the guarantee that you will receive a fully developed product.

**We would therefore ask you to read these operating instructions carefully before using the installation. Any further associated operating instructions for accessories and integrated third-party products must be strictly observed!**

These operating instructions inform users of this installation about the installation, its operating methods, its use, the safety instructions and the maintenance.

This information will help you to get to know the installation fully and to use it properly. It will also enable you to avoid repairs and the related loss of operational time.

In the event of any damage caused by non-observance of these operating instructions, any guarantee claims are invalid. This information will help you to use the installation properly.

MEIKO is constantly working on the further development of all its models.

We would therefore ask you to understand that because of this, we must reserve the right to make modifications at any time to any items covered by the contract in terms of their shape, fittings and technical characteristics.

No claims may therefore be based on the details, the images or the descriptions contained in these operating instructions.

Should you require any further information, or in case any particular problems not dealt with in great detail in the operating instructions should arise, you may contact the relevant MEIKO branch to obtain the information you require.

We should also like to inform you that the contents of these instructions do not form part of or amend any earlier or existing agreement, statement, or legal position.

All MEIKO's obligations arise from the relevant purchase contract which also contains the entire and only valid guarantee provisions.

The operating instructions must exist in the local language for each EU country. If this is not the case, the dish-washing machine must not be commissioned.

The original operating instructions in Germany, and all operating instructions in all languages for EU countries can be downloaded from the following address: <https://partner-net.meiko-global.com>

The complete technical documentation is issued to you free of charge. Additional copies will be charged at cost.

These contractual guarantee rules shall be neither extended nor restricted as a result of any explanations given in the instructions.

The MEIKO Company very much hopes that you will enjoy our product and use it successfully.

## 1.1 Storage

Always store the operating instructions close to the installation!  
The operating instructions must always be kept within easy reach!

## 1.2 Authorisation for service technicians of our service partners

MEIKO exclusively authorises authorised service partners for commissioning, inductions, repairs, maintenance, assembly and installation of the corresponding product groups within MEIKO devices.

## 1.3 Description of the machine

Please provide the following information on any query and/or when ordering spare parts:

|   |       |
|---|-------|
| Type:   | _____ |
| SN:   | _____ |
|  | _____ |
| <u>This information can be found on the plate.</u>                                |       |

## 1.4 Type label

The type label of the FV40.2, FV40.2G, FV60.2 is on the inside of the front panel.

## 2 Declaration of conformity

This section reproduces the content of the EC/EU Declaration of Conformity for the product. The signed EC/EU Declaration of Conformity with serial number is enclosed with the product.

**We hereby declare under our sole responsibility the conformity of the product with the essential requirements of this EC Directive:**

- 2006/42/EC Machinery Directive, OJEU L157/24

**Furthermore, we declare the conformity of the product with the following EU directives:**

- 2014/30/EU Directive on Electromagnetic Compatibility, OJEU L96/79, 29/03/2014
- 2011/65/EU Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment, OJEU L174/88, 01/07/2011
- The safety objectives set out in the Low Voltage Directive 2014/35/EU (OJEU L96/357, 29/03/2014) were met in accordance with Annex I, No. 1.5.1 of the Machinery Directive.

## 3 Explanation of the safety symbols used

The following safety symbols will appear throughout these operating instructions. The purpose of these symbols is to draw the reader's attention to the text of the adjacent safety information.



This symbol warns that there is danger to human life and health.



This symbol warns that there is danger to the installation, to material or to the environment.



This symbol denotes information that helps you to understand the installation's operation.



Warning of dangerous electrical current!



Warning of possible hand injuries!



**No splashing water:** prohibits the use of a high pressure hose.



**Danger of explosion:** indicates a potential explosion hazard.



**Non-potable water:** The water is not for drinking. Health can be endangered by drinking.



**Danger of burning:** indicates possible hazard due to hot surfaces or media.

## 4 Intended use



The machine is intended exclusively for commercially washing dishes, cutlery, trays, glasses, kitchen utensils, baking trays and containers.

The washware must be suitable for use in commercial dishwashers and the associated stress caused by high temperatures and cleaning chemicals.

Suitable cleaning chemicals and their dosing must be agreed with the chemical supplier.

The machine may only be operated by trained personnel.

Only operate the machine when it is in perfect working order.

Only operate the machine within the limits specified in the ambient conditions.

If servicing is required, only use original spare parts from the manufacturer. This is the only way to guarantee perfect function and safety.

The machine is not authorised for operation in a potentially explosive environment.

Setup, installation, repair and connection of an external dosing system may only be carried out by authorised specialists or by the dosing system supplier. This must not impair the safety of the machine. Other changes or conversions are not permitted.

## 5 General safety information

### 5.1 Operator's duty of care



The dishwashing machine has been constructed based on a risk analysis and after careful selection of the applicable harmonized standards, as well as additional technical specifications. It therefore corresponds to the latest technology and is guaranteed to provide maximum safety.

This level of safety can only be achieved in practice, however, if all the necessary measures are taken. The operator of the installation has an obligation of care to ensure that these measures are scheduled, and also to check that they are correctly executed.

#### **Measures to ensure the safe machine operation:**

##### The operator must ensure in particular that ...

... the washing machine is only used in accordance with the regulations.

Should it be used in any other way, damage or danger may occur, for which we accept no liability (see the chapter on "Use for the Purpose Intended").



... in order to preserve the operational and safety guarantees, whenever required, only original parts supplied by the manufacturer are used.

the user will lose the right to any possible claims if the appliance is modified using any parts other than original parts.

... only appropriately qualified and authorized personnel use, maintain, and repair the installation.



... the relevant personnel is regularly trained in all questions relating to safety at work and environmental protection and, in particular, that they are familiar with the operating instructions as well as with the safety information provided in them.



... the installation is only operated in perfect, operationally efficient condition, all safeguards and cladding panels are installed, and, in particular, that the safety systems and switch elements are regularly checked for their operational efficiency



... machines accessible only from behind may be operated only with rear panel cladding.



... the required personal protective equipment is made available to maintenance and repair personnel, and is worn by them.



... a functional test on all safety systems of the machine / installation is carried out during every regular maintenance.



... the operating instructions are always kept in legible, complete condition at the place where the installation is installed, and are always at hand.



... any necessary initial tests to parts supplied by sub-suppliers must be carried out. More detailed information, if required, can be found in the relevant Instructions for Use.



Once the washing machine has been installed, put into service and handed over to the customer/operator, no modifications (electrical or location modifications, for example) may be made. Modifications to the cleaning machine, and in particular technical modifications carried out without the manufacturer's written authorisation, or any modifications carried out by unauthorised persons, will lead to the complete loss of any guarantee claims and will invalidate any liability for the product.



... equipment for optimising energy consumption must not be used to reduce essential operating temperatures, as set out in DIN 10511.10512 and 10522. If you, the client, install equipment for optimising energy consumption, any possible reduction in the quality of the wash and hygiene is your responsibility.



## 5.2 Basic safety measures



Danger can arise from the improper use of the machine or if it is used for purposes for which it was not intended.

Parts carrying electric current as well as moving or rotating parts can cause

- Dangers to the user's life and limb and
- Material damage



The machine may only be operated by adequately qualified staff who have been trained by the operating company and who have been trained about the Hazard and Safety Instructions.

Qualified staff, as defined by the Operating Instructions, are persons:

- who are over 14 years of age,
- who have read and who observe the safety instructions,
- who have read and who observe the operating instructions (or the part applicable to the work to be carried out).



The machine operates with hot water (Temperature of wash water = 58-60 °C, by Cleaning and disinfection machine must be 74 °C). Avoid all contact with the rinse water.

Please observe appropriate protective measures. Observe all the instructions posted on the machine.



### **Warning !**

When electrical equipment is in operation, it is inevitable that certain parts carry a dangerous current.

Before the machine's cover plates or an electrical device are opened it is imperative the entire machine is switched off completely via the on-site power disconnection device and that it is secured against reactivation by using appropriate measures.

Only specialist personnel may carry out repairs and rectification work on the electrical part of the machine. The Health and Safety Regulations must be observed.

The machine may be used again only after **all cladding panels** have been installed by the user of the machine.



The machine may **not** be sprayed with a water hose or high-pressure cleaner.



IMPORTANT!

The machine must only be operated under the supervision of instructed staff.



The water in the wash-up area is non-potable and can't be used for food preparation!



IMPORTANT!

If you are unsure about the operation of the machine, the machine must not be used.



Do not place any solvents or other easily flammable substances in the wash-up area, as this increases explosion hazard



Steel scrub pads are not to be used for the pre-scouring nor for cleaning the items to be washed.

Do not wash any metal items in the machine which are not made of stainless steel.

The in-coming of metal parts (especially iron, tinfoil, copper) must absolutely be avoided.

The appliance must not be used to transfer waste water from other sources into the drain (Warning: risk of corrosion and blockage).

Only use suitable products for cleaning the stainless steel surfaces, which do not attack the material, form any deposits, nor cause any discolorations.



Door and flaps **MUST** be closed.

Open the door very carefully during the programme cycle, as otherwise wash water could splash out.



The tank heating element may still be hot after the tank has been emptied. There is therefore the danger of burns when the machine is cleaned manually.



Only detergents and rinse-aids suitable for the use in industrial dishwashers may be used.

Corresponding information is submitted by the manufacturers of such products.

Detergents and rinse agents can be injurious to health.

The manufacturers hazard instructions on the original packaging and in the safety data sheets must be observed.



At the end of operation the machine is to be switched off completely with the on-site power disconnection device.

The accompanying Operating Instructions must be observed for accessory devices, e.g. water treatment installations.



**WE ACCEPT NO LIABILITY FOR DAMAGE OR INJURY ARISING FROM FAILURE TO OBSERVE AND ABIDE BY THESE SAFETY INSTRUCTIONS!!!**

### 5.2.1 Working on electrical equipment



Any repair work and repairs to the power supply on the installation's electrical equipment may only be carried out by a qualified electrician!

Check the electrical equipment regularly! Tighten any loose connections! Replace any damaged leads/cables immediately!

## 6 Delivery, shipping, installation and assembly

### 6.1 Delivery

Check that the delivery is complete immediately after receiving it by comparing it to MEIKO's contract confirmation and/or the delivery note.

If necessary, complain about any missing parts immediately to the shipping company and notify MEIKO.

Examine the appliance for possible transit damage.



Should you suspect any damage has occurred during shipping, you should inform:

- the shipping company,
- and MEIKO

in writing, and also send a photo of the damaged parts to MEIKO. In writing, and also send a photo of the damaged parts to MEIKO.



Damaged appliances must not be commissioned.

### 6.2 Transport, installation and assembly

In order to avoid damage or life-threatening injuries during shipping of the installation, the following points must be observed:



- The shipping operations may only be carried out by qualified persons who observe the safety instructions.
- Observe transport instructions on the packing.
- The appliance must be moved with great care.
- Unpack the machine.

In order to ensure safe shipping, the installation parts are placed on a special four-sided wooden frame.

The washing machine must be transported on the supplied wooden frame only. The packing is specifically designed to allow the appliances to be moved safely and securely using a pallet truck.

The enclosed technical sheet indicates the connection and consumption ratings of the appliance.



Small quantities of steam may escape from the door of the appliance. Furniture and equipment situated near the door must be protected.



An engineer from your local MEIKO Service Centre can install the appliance at the correct point and connect the tables - upon request. An engineer from your local MEIKO Service Centre can install the appliance at the correct point and connect the tables - upon request.

The following must be observed during the installation of the dishwashing machine:

- The complete unit must be levelled in both directions using a water level.
- Compensate for an uneven floor by adjusting the feet.
- Table joints must be sealed with detergent-resistant sealing compound (e.g. silicone).

The vapour protection strip supplied deflects escaping vapour past furniture and at the same time protects the operating foil from impacts.

## 6.3 Operating conditions

It is taken for granted that the planning of the system, as well as installation, setting in operation and maintenance works are executed by sufficiently instructed staff and that these works are checked by responsible specialists. The indications on the name plate of the machine must correspond to the technical sheet and the local connection conditions.

Conditions to be provided by the customer:

- Frost free storage and installation area
- Electrical connection in accordance with the technical sheet
- Fresh water connection in accordance with the technical sheet
- Waste water connection in accordance with the technical sheet
- Anti-slip floor coverings should be provided around the washing appliance.

### 6.3.1 Requirements for the installation area

- Ensure that the storage and installation area is permanently frost free.

The machine is only frost-resistant in the state it is delivered or when provided with special features (option: frost drainage). If the appliance is installed in an area where the surrounding temperatures are below freezing point, the water freezing inside can damage the internal water components such as pump, solenoid valve, boiler, etc.



## 6.4 Requirements for the electrical connection

Work on the electrical part of the machine may only be undertaken by specialist personnel.



The customer must guarantee the following points relating to the connection:

- The correct voltage and type of current must be available
- Safeguard the power supply cable according to regulations and provide it with a power disconnection device in the fixed electrical installation.
- The machine must be connected to the potential compensation system!
- If an unearthed neutral (N) is used with alternating current, the power disconnection device must have 4-poles (with alternating current 2-poles).
- For connection to three-phase current a 5-pole terminal strip (L1, L2, L3, N, PE) must be used.
- Electricity supply without neutral conductor (N): when connecting to three-phase current, use a 4-pole clamping strip (L1, L2, L3, PE).
- Conductor colors: live conductor L1 = black/1, L2 = brown/2, L3 = grey/3, neutral conductor N = blue/4, protective earthing conductor PE = green-yellow.

### For Australia and New Zealand only:

All work carried out must be in accordance with AS/NZS 3000!



Current applicable standards and requirements of local utility companies are to be adhered to with regard to protective measures and connection of the potential compensation system.

The products are intended for permanent connection to the on-site power supply and have been tested for the market accordingly. Any other form of electrical connection is to be established by a licensed electrician.

Do not protect by fuses any additional consumers together with the dishwashing machine.

- All conductor fixing screws must be re-tightened before commissioning the appliance.



The wiring diagram is behind the front panel, resp. front cladding of the appliance. The enclosed wiring diagram must remain in the appliance.

### **Note to customers**

Dishwashing machines, bedpan rinsing units and systems are intended for fixed, electrical power supply installation as well as connection to the locally available equipotential bonding and have been equipped with a corresponding connection option.

Operators may decide at their own discretion and responsibility to implement personal protection in locally available services in collaboration with a specialist electrician registered at the corresponding energy supplier using the following:

- AC/DC sensitive fault current protection switch with at max. 30mA EN 62423

or

- Automatic shutdown of the supply in the event of loss of protective earth conductor conductivity (EN 60204-1, Section 8.2.8.c)

## **6.5 Requirements for the fresh water connection**

### **For Australia and New Zealand only:**

All work carried out must be in accordance with AS/NZS 3500.1!

Each appliance carries the DVGW test symbol and does not require an extra safety valve in the water feed.

- Fresh water connection must be made according to EN 1717 or according to local regulations.

### **The machine is equipped with a water supply air gap (group A, model A in accordance with DIN EN 1717).**

- The requirements of the clean water supply in the accompanying GiO module operating and service manual are to be observed for machines equipped with the GiO module.



**IMPORTANT!**

The minimum flow pressure of the clean water supply upstream of the solenoid valve must be 0.6 bar; if water-softening (AktiveClean) equipment is incorporated into the machine, it should be 1 bar; and for machines equipped with the GiO module it should be 1 bar.

The maximum pressure must not exceed 5 bar.

- If the flow pressure is below the minimum, increase the flow pressure with a booster pump; if the maximum pressure is exceeded, limit it with a pressure reducer.
- A water stop is integrated into the fresh water inlet of the machine. This, together with the leak water switch in the floor pan of the base, ensures that the fresh water supply will be cut off in the event of any leak
- Suitable protective measures must be taken to ensure that no iron particles can enter the appliance via the mains water supply. Similarly, precautions must be taken to prevent the entry of other metal particles, for example copper turnings. Corresponding instructions are contained in the installation drawing. Therefore suitable measures must be taken.
- A dirt trap must be fitted into the fresh water supply to protect the solenoid valve.

### **For Australia and New Zealand only:**

All work carried out must be in accordance with AS 3500!

## **6.6 Requirements for the waste water connection**

- A waste water pump is integrated in the waste water line (further information about this is in the technical sheet).
- The drain hose must be connected to the waste water pipe in the building.
- A grease trap may be needed, depending on the machine application.
- The requirements of the waste water supply in the accompanying GiO module operating and service manual are to be observed for machines equipped with the GiO module.

### **For Australia and New Zealand only:**

The drain hose must be connected so that it is waterproof with a drain fitting in accordance with AS 1589 AS 2887 and a sanitary waste water pipe or sanitary waste water fitting in accordance with AS / NZS 1260.

## 6.7 Emergency-off

- Switch the machine off completely via the on-site power disconnection device.

## 6.8 Chemicals for the operation of the appliance



Only alkali detergents and acid rinse agents suitable for use in commercial dishwashers may be used. Corresponding information is submitted by the manufacturers of such products.

MEIKO recommends brand cleaning products from leading manufacturers. - cleaning and hygiene products are an excellent choice.

If unsuitable products are used, the life expectancy of the dosing units can be reduced considerably.

Observe the dosing instructions of the manufacturer.

Detergents and rinse-aids can present a health hazard if they are not correctly used. Please observe the manufacturers' instructions on the original packing and on the safety data sheets.

"Items for rinsing are tribologically influenced in particular by chemicals and increased temperatures during the process, as well as mechanical stresses caused by handling and transporting."

If a de-scaling agent is used, please strictly observe the manufacturer's instructions reg. handling and safety. After having used such an agent, the product must be completely removed from the machine, as even small residues are sufficient to destroy plastic parts and packing materials.

### Chemical product settings

The correct settings for the quantity of detergent and rinse agent depend on the product used.

The relevant chemical supplier can install the correct setting.

## 7 Settings for initial commissioning by the service engineer

### 7.1 Commissioning

In order to avoid damage to the installation and the injury and death of persons when commissioning the installation, the following points must be observed without fail:

Any necessary initial tests to parts supplied by sub-suppliers must be carried out. More detailed information, if required, can be found in the relevant Instructions for Use.



- The installation may only be commissioned by suitably qualified persons observing the safety instructions.
- Before initial startup, check that any tools and parts not belonging to the installation have been removed.
- Check whether any escaping liquid is removed.
- Activate all the safety systems and door switches before commissioning.
- Check that all screw connections are tight.
- Please also read the chapter on "General safety instructions".
- Commissioning and instructions will be provided by technicians specially trained by Meiko. The operator may only use the installation after training has been provided.
- The "Commissioning certificate for GiO modules" is to be observed for machines equipped with the GiO module and the instructions adhered to accordingly.

## 8 Washing with dish-washer



The appliance must not be used without a thorough knowledge of the "Operating Instructions". Incorrect operation could result in injuries to personnel or damage to the appliance.

### 8.1 Operating panel

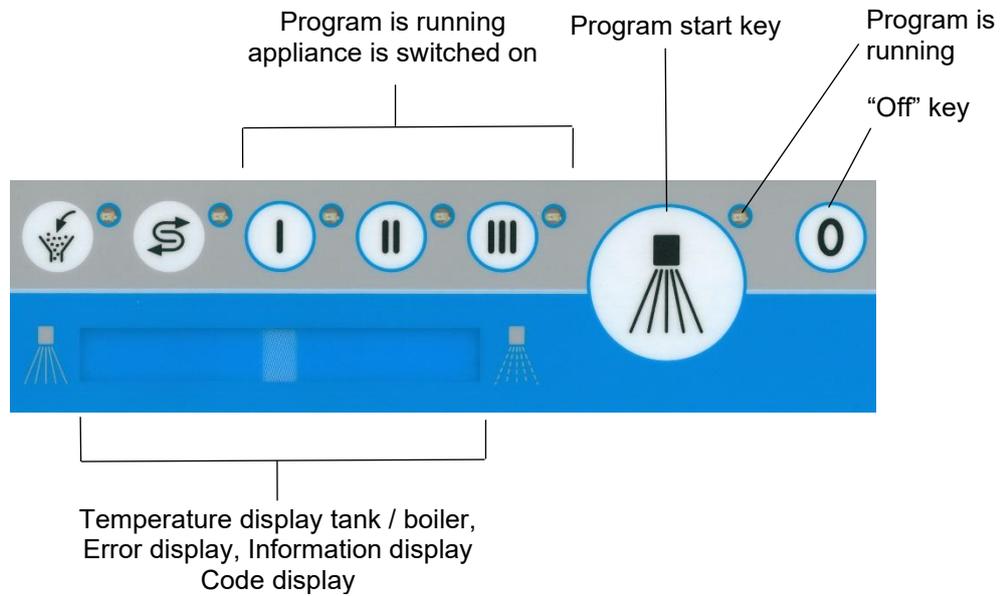


Illustration 1; Operating panel

| Taste/Anzeige | Meaning  |
|---------------|--|
|               | Short cycle for lightly soiled items<br>– Wash program I |
|               | Normal program – Wash program II                         |
|               | Intensive program – Wash program II                      |
|               | Wash temperature   |
|               | Final rinse temperature                                  |
|               | Program start<br>Tank drain<br>Self-cleaning cycle       |
|               | Switch off appliance/<br>Cycle interruption              |

Table 1; Program key function / items to be washed

## 8.2 Preparation for washing and rinsing

The preparatory work described below must be carried out before each operation.



- Open the door.
- Insert the sieves. Insert the sieves.
- Close the door.



**ATTENTION!** Danger of crushing!

Close the door with both hands.

- Switch on the appliance by pressing one of the program pre-selection keys.



During the filling and heating phase, the light above the pre-selection key will flash. When the light remains constantly lit, the machine is ready for operation.

The time until the operation readiness is reached depends on the temperature of the supplied water and the installed boiler, resp. tank heating capacity.

In the case of cold water supply, duration is 12 minutes for: FV 40.2 / FV 40.2 G / FV 60.2.

## 8.3 Automatic dosing

The required detergent and rinse aid is moved from the containers into the tank or boiler via electronically controlled dosing units. The dosing is effected automatically acc. to the requirements arising during the wash process.



If unsuitable products are used, the life of the dosing equipment will be significantly shortened.

We therefore recommend that detergents should have a pH value greater than 7 and that rinse agents should have a pH value between 7 and 2.

## 8.4 Operation during washing and rinsing cycle



The following fundamental principles must be observed when placing the items to be washed in the baskets:

- All hollow containers must always be loaded upside down. Otherwise the water will be trapped inside and they will not dry to a brilliant finish.
- Plates, trays and big plates should always stand at a **slight angle** in the basket. The inside faces pointing upwards.
- When using cutlery baskets, ensure that cutlery is always inserted handle down.
- Load the cutlery baskets with a **mixture** of spoons, knives and forks, as identical items of cutlery can be too close together.
- Do **not overload** the baskets.
- **Do not stack** the dishes in the wash basket directly on top of each other. As the wash water could not strike the items directly and unnecessarily long wash times would have to be selected. Short wash times with baskets which are not overloaded are much more economical.

Program start key



### 8.4.1 Start the wash cycle

- Pre-wash the dishware (major food residues, serviettes, tooth picks, etc.) and place in the basket.
- Place the basket in the appliance, ensuring that it is correctly centred.
- Close the door.
- Press the program start key.

The appliance washes and rinses automatically and switches off the wash program after completion. The program cycle is indicated by a light on the program start key.



The wash time can differ from the set program time if the boiler heating capacity or tank heating capacity (by disinfection machine) is not sufficient for heating up, the fresh water to the pre-set boiler temperature to the keep program time. In this case, the automatic wash time extension is activated. (see chapter 11.5.1)

### 8.4.2 Remove the washed items

- When the light goes out, open the door and remove the basket.

## 9 Shutting down the dishwasher

“Off” key



- Press the "0"key (OFF key). The machine is switched off when all the lights are out.
- Press the program start key to drain the tank.

Program start key



- The tank interior is sprayed with clean hot water after the tank water has been drained. The door must remain closed. The waste water pump switches off automatically.

## 10 Care and maintenance

### 10.1 Care, general

The appliance has been designed to minimise the need for cleaning, care and maintenance.



However, for a reliable, safe and permanent function of the appliance and in the interest of hygiene and cleanliness a correct care and maintenance is necessary. To facilitate this procedure, a maintenance contract can be concluded with the manufacturer or the manufacturer's agent.



Works/repairs which were not correctly executed and the use of unauthorised parts by unqualified personnel endanger both operators and the appliance, and will invalidate the warranty.

## 10.2 Refilling of detergent

There are two different types of detergent containers:

### Incorporated container

The storage container is located behind the front panel in the lower part of the cleaning machine. Can be tilted towards the front after a slight lifting.

- Re-fill the container marked "detergent" if necessary.

### External container

The container is located next to the appliance.

- Check the filling level of the container and if necessary, replace it by a full one



Only non-foaming alkali detergents (pH > 7) suitable for commercial dishwashers may be used.

Detergent dosing units must be checked to see if they are functioning properly if there is reason to believe that they are malfunctioning. Carry out a visual inspection!

## 10.3 Refilling of rinse aid

There are two different types of rinse aid containers:

### Incorporated container

The storage container is located behind The front panel can be tilted towards the front after a slight lifting. The front panel in the lower part of the washing machine.

- Re-fill the container marked "rinse-aid" if necessary.

### External container

The container is located next to the appliance.

- Check the level and, if necessary, replace the container by a full one

Only non-foaming acid rinse aid (pH < 7) suitable for commercial dishwashers may be used.

Detergent dosing units must be checked to see if they are functioning properly if there is reason to believe that they are malfunctioning. Carry out a visual inspection!



## 10.4 Cleaning

After the tank has been drained, proceed as follows:

- Do not use a foaming detergent for dish-washing by hand for pre-cleaning close to the dish-washer. Foam can cause malfunctions in the dish-washer and a poor wash.
- Food residues sticking to the tank, tank heating element and sieves must be removed with a brush.
- Dismantle the wash arms and rinse them under running water.
- Wash nozzles must be cleaned daily.
- The cleanliness of final rinse nozzles must be checked weekly and if necessary clean under running water.



The inserts for the final rinse nozzles must be inserted with the prongs facing the water flow.

### 10.4.1 Safety instructions for cleaning



The tank heating element may still be hot after the tank has been emptied. There is therefore the danger of burns when the machine is cleaned manually.

The machine, switch cabinet and other electrical components must NOT be sprayed with a hose or a high pressure cleaner.

### 10.5 Care of stainless steel surfaces

We recommend cleaning the stainless steel surfaces only when needed with cleaner and care products suitable for stainless steel.

Lightly soiled parts can be wiped with a (possibly damp) cloth or sponge.

Be sure to wipe dry after cleaning to avoid traces of scale. Use demineralised water if possible.

Do not use aggressive cleaning or scouring agents.

The care products must not attack the stainless steel, form deposits, or cause discoloration.

Never use cleaning agents that contain hydrochloric acid or bleaches based on chlorine.

Never use cleaning equipment that you have used previously by non-stainless steel to avoid external corrosion.

Aggressive external influences due to cleaning and care products that evaporate in the vicinity of the dish-washing machine, or caused by direct application, can lead to machine damage and put the material at risk (e.g., aggressive tile cleaners).

#### Caution!

Respect the safety rules of the manufacturers on the original packing as well as on the safety data sheets.

### 10.6 Basic cleaning

MEIKO offers the M-5900PCL dishwasher cleaner for regular basic cleaning of the machine. The dishwasher cleaner reduces cleaning effort and eliminates unpleasant odours.

The dishwasher cleaner can be used as required. MEIKO recommends quarterly use. The MEIKO dishwasher cleaner is available from MEIKO service partners.

### 10.7 De-scaling

If the appliance was operated with hard water, the boiler and wash tank could have lime scale deposits. De-scaling of the tank interior, boiler housing, tank heating, boiler heating and wash and final rinse system then becomes necessary



For de-scaling the appliance use only products suitable for industrial dishwashers. Please observe the instructions of the manufacturers of such products.

After de-scaling the appliance:

- Remove the de-scaling agent completely from the appliance. 1 or 2 rinse cycles with fresh water are necessary to achieve this.



Even small residues of de-scaling agents can be sufficient to destroy plastic parts and sealing materials! If the appliance is heavily scaled, you should ask a service engineer from the agency responsible to de-scale the boiler.

## 11 Machine with built-in water softening device AktivClean

### 11.1 General

The Incorporated softener AktivClean is working automatically. It must be happens refilling the salt. The regeneration water is fed directly into the drain. It is not necessary to drain the tank during the regeneration process. The temperature of the feed water must not exceed 50° C.

### 11.2 Adjustment of water hardness

The water softening device is pre-set to 30°Gh in the factory. When the service engineer installs or commissions the appliance he should adjust this value depending on the actual water hardness. Should there be any further changes in the water hardness, this parameter must be adjusted accordingly as set out in the Short Programming Instructions.

### 11.3 Capacity of the built-in water softening device between two regenerations depends.

| Water hardness (°dH) | Capacity (l) |
|----------------------|--------------|
| 8                    | 250          |
| 10                   | 200          |
| 12                   | 167          |
| 14                   | 143          |
| 16                   | 125          |
| 18                   | 111          |
| 20                   | 100          |
| 22                   | 91           |
| 24                   | 83           |
| 26                   | 77           |
| 28                   | 71           |
| 30                   | 67           |
| 32                   | 63           |
| 34                   | 59           |
| 36                   | 56           |
| 38                   | 53           |
| 40                   | 50           |
| 42                   | 48           |

### 11.4 Regeneration



The automatic regeneration is indicated by a yellow light. The time of regeneration is 8 minutes.

A further programme sequence can take place during this time. If a second programme cycle is started, the washing time is extended until the regeneration is completed. The draining pause and the fresh water final rinse only take place after the regeneration is complete.



A red light indicates when the salt container has to be re-filled.

The salt container is located in the tank. It will take approximately 1.5 kg of regeneration salt, grain size 0.3 – 1 mm. This quantity is sufficient for about 12 regeneration cycles. Use a funnel for adding the salt to the container. The seal and the thread of the salt solution container must be cleaned before closing the container.



The seal and the thread of the salt solution container must be cleaned before closing the container. Carefully lock the salt solution container cover. The penetration of wash water can reduce the capacity of the built-in water softening device.



We recommend that you fill the machine immediately after the regeneration process in order to dissolve and remove from the wash tank any salt particles that have been spilled.

If the salt remains in the wash tank for a length of time, this can result in corrosion and even pitting corrosion in the bottom of the tank.

## 11.5 Error messages

### The red light is flashing:

*The water softening device is exhausted and supplies only hard water.*

- Refill with salt

It is important to note that if the machine continues to be used when the water softener is exhausted, capacity can be reduced and the machine may even become unusable.



### 11.5.1 Operation on a power optimisation system



#### Note

According to the EN 17735 hygiene standard, an uninterrupted energy supply is required for proper operation of a dishwasher. Use of an on-site performance optimisation system is not permitted in accordance with EN 17735, as switching off water heaters leads to temperature reductions and it cannot be guaranteed that the washing and hygiene result will be achieved.

## 12 Basic information on the appliance



Each dishwashing machine is manufactured acc. to the latest state of the art technology. Operation is safe.



Dangers could arise from this model, if it is not correctly operated by unsuitable operating staff or if it is not used acc. to its purpose.

### Liability

We accept no responsibility for damage of the appliance and other objects caused by operating faults, resp. non-observance of the operating instructions. Any modifications to the appliance - especially technical modifications inside - undertaken by unauthorised persons without the written permission of the manufacturer will invalidate the warranty.

### 12.1 General description of the washing machine

#### 12.1.1 Execution

Square basket appliance with stationary basket

### 12.1.2 Wash principle

The appliance has one wash and one final rinse cycle.

The temperature regulator maintains the wash temperature of 58-60 °C. A centrifugal pump circulates the water out of the wash tank into the wash nozzles. Therefore an even washing result can be guaranteed.

The washing cycle is followed by the fresh water final rinse. The items are rinsed via a separate nozzle system with hot fresh water at 80 - 83° C (for glass programme 65 °C). Thus heating up the items for the following drying process. At the same time the final rinse water serves for the regeneration of the wash water, the level of soil of the wash water thus being reduced.

### 12.1.3 Disinfection in accordance with the $A_0$ value process

#### Note

High water temperature and long programme durations can cause glass corrosion and detachment of decorative finishes. Only use dishes that are suitable for the high stress placed on them.

#### $A_0$ control

The term  $A_0$  refers to a way of measuring how microorganisms are eliminated by moist heat disinfection methods. By using a moist heat disinfection method, it is expected that a specific temperature over a period of time has the effect of eliminating a predictable number of microorganisms with a particular resistance.

The standard setting for a dishwashing machine with  $A_0$  – control is the hygiene value  $A_0$  30:

- The tank temperature during washing is up to 74 C.
- For tank temperatures of 65 C or higher, each tank temperature is assigned a factor.
- Using the measured tank temperature, a value is determined and added every second until the hygiene value  $A_0$  30 is reached.
- The rinsing process runs until the end of the programme cycle time, but at least until the hygiene value is reached. After this comes a pause for draining and the final rinse.

A digital display with a grey background and black text. It shows 'A0 30' on the left and '83°C' on the right, separated by a vertical bar.

The display shows the current  $A_0$  value.

### 12.1.4 Disinfection in accordance with the Thermolabel or thermal disinfection process

#### Note

High water temperature and long programme durations can cause glass corrosion and detachment of decorative finishes. Only use dishes that are suitable for the high stress placed on them.

### **Thermolabel control**

In a way which is similar to A<sub>0</sub> control, machines with Thermolabel control have a disinfection process which uses moist heat. The dishwasher heats the rinse water to a higher temperature in order to eliminate germs. The efficacy of the disinfection can be tested using a measurement strip, the Thermolabel. The measurement strip changes colour after 4 seconds at 71 °C for a wash item.

- During washing, the tank temperature is heated up to 71° C and maintained at that temperature.
- The rinsing process runs until the end of the programme cycle time, but at least until the temperature value is reached. After this comes a pause for draining and the final rinse.
- Washing at high temperatures and long spells in the wash tank can lead to glass corrosion and premature wear to decoration.

### **Thermal disinfection - control**

Thermal disinfection works according to the same principle as Thermolabel control, but other requirements apply:

- The disinfection temperature is  $\geq 80^{\circ}$  C, which must be maintained on the washware for  $\geq 30$  s.
- The rinsing process runs until the end of the programme cycle time, but at least until the temperature value and specified stop time are reached. After this comes a pause for draining, final rinse and a subsequent application time.

Thermolabel and thermal disinfection control offer a disinfection effect that exceeds the standard, such as for hospitals, care homes, requirements according to the ÖGSV Guide-line.

### **12.1.5 Water change programme (option)**

The program pre-selection keys can be allocated to a water change programme. In the standard setting this applies only to button III.

After completing the wash programme, all the water is pumped out of the the tank. Flushing with fresh water follows. This water remains in the wash tank and is used as the next tank filling.

Then the programme ends and the programme start button light goes out.

Now the following options are possible:

1. Open door, remove tray, close door; this makes the washer ready for operation (fill tank, heat)
2. Switch to programme 1 or 2; this makes the washer ready for operation (fill tank, heat)
3. After changing the tray, press the start button; this makes the washer ready for operation (fill tank, heat), and then immediately starts the washing programme.
4. Press the "0" button (off button) and then press the start button to launch the self-cleaning programme for complete flushing of the machine.

### 12.1.6 Detergent dosage

The detergent dosing unit (option) is designed for the automatic adding of liquid, alkaline detergent into the wash water.

The detergent is transported out of the container into the wash tank by means of a hose line. The dosing unit is self-priming. The dosing is effected during each filling cycle and at the beginning of each programme cycle using timer control.



Normally, a dosing of approx. 2 ml of detergent per liter of tank water is the correct concentration. This can be increased/reduced acc. to the water quality, items to be washed and degree of soiling to 5 ml/l or to 1 ml/l.

### 12.1.7 Rinse aid dosing

The rinse aid dosing unit is designed to automatically add liquid final rinse aid into the fresh water.

The rinse aid is transported out of the container into the fresh water supply line by means of a hose line. The dosing unit is self-priming. The dosing takes place during each filling cycle.



The correct dosing results in a smooth, even water film.

In case of overdosing, there are bubble and stripe formations - reduce dosing.

In case of under-dosing, water drops remain on the washed items - increase dosing.

## 12.2 Noise level

Work place noise level LpA £ 70 dB

## 12.3 Data reg. the electrical and hydraulic equipment

See attached technical sheet

## 12.4 Dimensions, technical data, installation instructions

See attached technical sheet

## 13 Non-ionizing radiation

Non-ionizing radiation is not produced intentionally but unfortunately comes about due to electrical operating equipment (e.g. electrical motors, high-voltage cables and magnetic coils). In addition the machine has no strong permanent magnet. There is a high possibility of eliminating the influence of active implants (e.g. pacers, defibrillators) by maintaining a safety distance of 30 cm (distance of the field source to the implant).

## 14 Tips for self-help in the case of faults

| Fault:   | Remedy   |
|--|--|
| <b>Machine does not fill.</b>                                      | <ul style="list-style-type: none"> <li>• No water available</li> <li>• Dirt trap blocked</li> <li>• Level switch defective</li> <li>• Solenoid valve defective</li> <li>• Door safeguard defective</li> </ul>  |
| <b>Rinse water does not spray!</b>                                 | <ul style="list-style-type: none"> <li>• No water available</li> <li>• Dirt trap blocked</li> <li>• Solenoid valve defective</li> <li>• Booster pump has failed</li> <li>• Fresh water rinse system furred</li> </ul>  |
| <b>Stripes and smears on the dishes!</b>                           | <ul style="list-style-type: none"> <li>• Rinse water mineral content too high (see operating instructions)</li> <li>• If this is observed only at particular times, check water softener for regeneration. This must not be carried out during the dishwashing operation.</li> <li>• Water pre-treatment defective or not carried out</li> <li>• Different water type depending on the waterworks</li> <li>• Unsuitable rinse aid products or wrong dosage quantity</li> </ul>   |
| <b>Formation of a significant amount of foam in the wash tank!</b> | <ul style="list-style-type: none"> <li>• Detergent for dish-washing by hand enters the wash tank because of pre-cleaning the dishes</li> <li>• Daily cleaning is carried out with foaming cleansing agents which afterwards enter the machine.</li> <li>• Improve pre-wash, as too much food residue is entering the tank. Alternatively, empty wash tanks between uses.</li> <li>• Rinse water quantity too low</li> <li>• Detergent or rinse aid product not suitable</li> <li>• Temperatures too low &lt; 40°C</li> </ul> |

## 15 Staff training

Only trained and instructed personnel are allowed to work on the dishwashing machine. Staff responsibilities for the installation's operation, maintenance and repair must be clearly defined.

Any personnel undergoing training are only allowed to work on the dishwashing machine installation under the supervision of an experienced person.

| Persons<br>Activity            | Trained operating<br>personnel | Trained<br>in-house<br>technician | Trained in-house<br>technician or instal-<br>lation engineer |
|--------------------------------|--------------------------------|-----------------------------------|--|
| Installation and assembly      |                                |                                   | ◆  |
| Commissioning                  |                                |                                   | ◆  |
| Operation, use                 | ◆                              | ◆                                 | ◆  |
| Cleaning                       | ◆                              | ◆                                 | ◆  |
| Checking safety devices        | ◆                              | ◆                                 | ◆  |
| Fault finding                  |                                | ◆                                 | ◆  |
| Troubleshooting,<br>mechanical |                                | ◆                                 | ◆  |
| Troubleshooting,<br>electrical |                                |                                   | ◆  |
| Maintenance                    |                                |                                   | ◆  |
| Repairs                        |                                | ◆                                 | ◆  |

Training should be recorded in writing.


## 16 Authorized user of this documentation



The works described in this booklet (chapter 16 - 20) may only be carried out by specialists of the manufacturer, the responsible agency or an authorized dealer.

## 17 Settings / modifications / on-site adaptation

### 17.1 Using the keyboard for programming

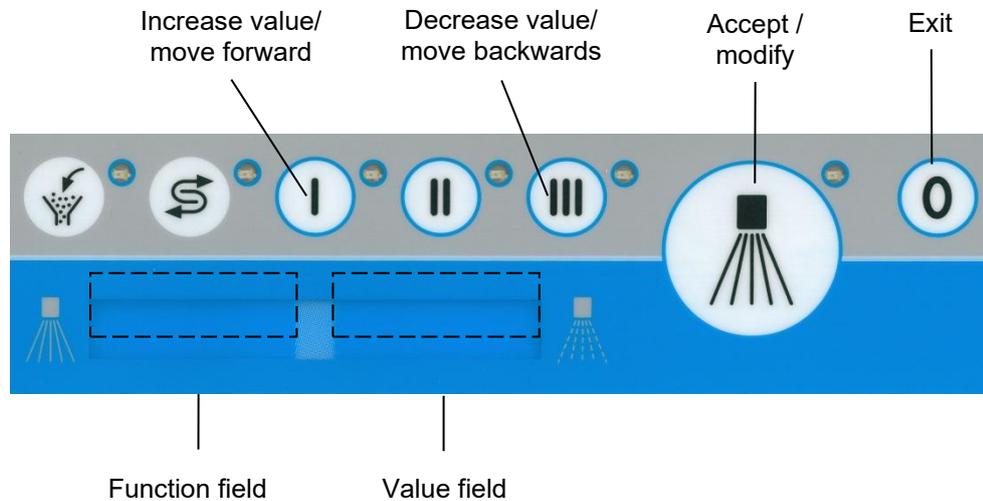

Access codes for various user-levels have been defined. Once the complete code has been entered, the entered code is compared with the internal code table. Depending on the code entered, the corresponding user level will be accessed. 2 access codes are available for each user level; the first is for restricted access, i.e. no modification of parameters is possible (viewing mode), and the second gives access to the entire range of functions (viewing and modification).

In the short programming instructions accompanying every machine in the series, this is described in condensed form.

For control programming, the power supply must be available but the machine must be completely switched off (no LED must be illuminated).

#### Code – input:

|                           |            |
|---------------------------|------------|
| View service data:        | CODE 10000 |
| Modify service data:      | CODE 10001 |
| View configuration data:  | CODE 20000 |
| View dosing technology:   | CODE 40000 |
| Modify dosing technology: | CODE 40044 |

The code numbers for the further levels can be found in the Service Manual.

### 17.2 Code entry

To get into the code entry mode, you should keep the key “0” pressed (for around 3 seconds) until you see



on the display unit.

By pressing the key “0” once again you can leave the programming area at any time.

The digit to be modified will flash.

Press the “I” key to increase the value/code indicated on the display unit, or press the “III” key to decrease it, or press the “accept” key to save it. The next value will then flash and will be the only one visible.



If your entry is incorrect you will exit the code entry procedure, and the information code 122 will be displayed.



If you enter all the digits correctly you will arrive at the chosen level, either service, configuration or machine data.

### 17.3 Service level

The list of service parameters can be found on this level (parameter numbers 1xx). Here you can view these or modify them, or you can also call up the ventilation of the rinse and wash hoses.

On the service level, you will first see the display below:



This corresponds to the viewing/modifying parameters (see 16.3.1)



This corresponds to rinse aid inlet ventilation (see 16.3.2)



This corresponds to detergent inlet ventilation (see 16.3.3)



This corresponds to manual start to regeneration (see 16.3.4)

Press the “I” key to move forwards or the “III” key to move backwards or the “accept” key to make a selection. You are now at the current level.

You can leave this level by pressing the “0” key.

### 17.3.1 View/modify parameters

Indication



this display by pressing the “accept” key.

Now, the first parameter will be displayed with a value.



Press the “1” key to go forwards and the “III” key to go backwards, until the parameter you require is displayed.

Confirm the parameter to be modified by pressing the “accept” key, the value will flash. + Press the “1” key to increase the value, the “III” key to decrease the value, and the “accept” to save the value.

You can leave this level by pressing the “0” key.

See 16.4. for list of parameters

### 17.3.2 Ventilating the rinse aid inlet



this display by pressing the “accept” key.

Now the dosage pump will be activated and the remaining running time will be indicated.



You can leave this level by pressing the “0” key. The ventilation will be interrupted off.

### 17.3.3 Ventilating the detergent inlet



this display by pressing the “accept” key.

Now the dosage pump will be activated and the remaining running time will be indicated.



You can leave this level by pressing the “0” key. The ventilation will be interrupted off.

Should the ventilation process be insufficient, repeat the process.



The function "vent detergent pipe" is not existing with machines including detergent dosing system type **ADT** ('Advanced Dosing Technology with depression dosing). The detergent dosing pipe is vented automatically when the first cycle is running, after filling of the detergent reserve container.

### 17.3.4 Manually start of regeneration



this display by pressing the "accept" key.

Now the regeneration will be activated and the remaining running time will be indicated.



You can leave this level by pressing the "0" key. The regeneration is interrupted. The regeneration re-commences when the machine is switched on again.

### 17.3.5 Configuration level

You can find the list of configuration parameters on this level (parameter numbers 2xx). + Here you can view these and modify them. You can also call up the status of the inputs and outputs, or set the outputs for testing.

On the configuration level, you will first see the display below:



This corresponds to the viewing/modifying parameters. (see 16.3.1)



This corresponds to viewing the status of inputs. (see 16.3.7)



This corresponds to viewing and setting the status of outputs. (see 16.3.8).

Press the "I" key to move forwards or the "III" key to move backwards or the "accept" key to make a selection. You are now at the current level.

You can leave this level by pressing the "0" key.

### 17.3.6 Viewing / modifying parameters: (depending on the code entered)

Indication



this display by pressing the “accept” key.

Now, the first parameter will be displayed with a value.



Press the “I” key to move forwards or press the “III” key to move backwards, until the parameter you require is displayed.

Confirm the parameter to be modified by pressing the “accept” key, the value will flash. + Press the “I” key to increase the value, the “III” key to decrease the value, and the “accept” to save the value.

You can leave this level by pressing the “0” key.

See 16.4. for list of parameters

### 17.3.7 Viewing input status:

Indication



this display by pressing the “accept” key.

by pressing the “accept” key.



Press the “I” key to move forwards and the “III” key to move backwards, until you reach the input you require.

Display: input set



Display: input not set



You can leave this level by pressing the “0” key.

Assignment details for the inputs are given on the assignment list for each machine (see 16.5).

### 17.3.8 Viewing / modifying output status (according to code entered)

Indication



this display by pressing the “accept” key.

#### Viewing:

Now, the first output will be shown, with status.



Press the “I” key to move forwards and the “III” key to move backwards, until you reach the output you require.

#### Modifying:

Press the “accept” key to confirm the modification of the output, the value will flash.

Press the “I” key to modify the value and press the “accept” key to save it.

The output is now set.



You can leave this level by pressing the “0” key.

Assignment details for the outputs are given on the assignment list for each machine (see 16.5)

### 17.3.9 Viewing / modifying dosing technology level

By entering code 40000 (read only) or 40044 (read / enter), the user can access the new 4th parameter level summarizing all the dosing technology parameters:

P104, P105, P218, P219, P224, P225, P321, P322, P326, P327.

See 16.4 for list of parameters

## 17.4 Parameter list

| Par. No. | Configuration options                        | Use as     | value range  | Unit           | Factory setting | Note   |
|----------|--|------------|--------------|----------------|-----------------|--|
| 101      | Wash program Key 1                           | Parameters | 1 .. 50      | -              | 1               | Allocate the wash program to the key 1<br>Assignment adjustable  |
| 102      | Wash program Key 2                           | Parameters | 1 .. 50      | -              | 2               | Allocate the wash program to the key 2<br>Assignment adjustable  |
| 103      | Wash program Key 3                           | Parameters | 1 .. 50      | -              | 5               | Allocate the wash program to the key 3<br>Assignment adjustable  |
| 104      | Rinse agent Dosing quantity                  | Parameters | 0.10 .. 1.00 | ml/Liter water | 0.2             | Value can be read from the rinse aid container label (dependant on water quality)  |
| 105      | Detergent Dosing quantity                    | Parameters | 0.1... 20.0  | ml/Liter water | 2.0             | Value can be read from the detergent container label (dependant on water quality)  |
| 106      | Hardness degree                              | Parameters | 0 .. 50      | [°dH]          | 0               | The quantity of soft water available between two regenerations depends on the hardness of the water.   |
| 107      | Beep ON/OFF                                  | Parameters | 0/1          | -              | 1               | Switch on/off acoustic ready message   |
| 108      | Mode "Clear" display                         | Parameters | 0/1          | -              |                 | "Clear" display<br>0: via INFO 420, 520<br>1: display of special characters  |
| 109      | Partial / full desalination available?       | Parameters | 0,1,2        | -              |                 | Partial / full desalination available?<br>0: NO<br>1: partial demineralisation (TE)<br>2: full desalination (VE)   |
| 110      | Hardness litres per cartridge type           | Parameters | 0 .. 250     | 1000 L         |                 | When the cartridge's capacity is reached (hardness litres/degree of hardness), "Replace Cartridge" will be displayed (INFO 725) (only in the case of TE) |
| 111      | Total Operation time Indication              | Indication | 5 figures    | h              |                 | Operation time query only  |
| 112      | Total number of wash cycles                  | Indication | 5 figures    | -              |                 | Wash cycles/loads, query only  |
| 113      | Total number of wash cycles since last reset | Indication | 5 figures    | -              |                 | Wash cycles/loads, re-setting possible   |
| 114      | Serial number                                | Indication | 8 figures    | -              |                 | Option for calling up works parameters   |
| 115      | Condition Remaining cartridge capacity       | Indication | 0 .. 100     | %              |                 | Only for partial / full desalination<br>TE: indication in %<br>VE: 100 = OK;<br>0 = replace  |
| 119      | IR-communication                             | Parameters | 0/1          | -              | 1               | It is possible to shut off communication via IR interfaces. (0)  |

| Par. No. | Configuration options                  | Use as     | value range              | Unit  | Factory setting | Note  |
|----------|--|------------|--------------------------|-------|-----------------|---|
| 121      | Activate maintenance display           | Parameter  | 0 .. 3                   |       | 0               | 0 = OFF<br>1 = Operating hours<br>2 = Batch counter<br>3 = Operating hours or number of batches   |
| 122      | Operating hours reference value        | Parameter  | 10 .. 10000              | Hour  | 0               | Evaluation according to operating hours   |
| 123      | Batch counter reference value          | Parameter  | 100 .. 50000             | Loads | 0               | Evaluation according to number of batches   |
| 124      | Reset maintenance display              | Parameter  | 0/1                      |       | 0               | 0 = NO<br>1 = YES<br>Note: When using the M-Commander an upload and download is necessary for the reset procedure.  |
| 120      | Total number of wash cycles Indication | Parameters | 0/1                      | -     | 0               | Effective only upon power supply reset ON/OFF<br><b>ATTENTION!</b> All changes to service parameters will be reversed.<br>Power supply reset must be carried out within 5 minutes, otherwise factory settings will not be loaded.<br>Without power supply reset, the information 123 will be displayed.   |
| 201      | Machine type                           | Parameters | 1 - 9                    | -     | 1               | 1: FV 40.2 / FV 60.2 / FV28 GiO-M<br>2: FV 130.2 / FV 250.2 / DV 270.2<br>3: DV 80.2 / DV 200.2<br>4: DV 120.2 / DV 125.2 / DV 200.2PW<br>5: FV 70.2D / FV 40.2TL / TopClean60<br>6: FV 130.2 TL / FV 250.2 TL / DV 270.2 TL<br>7: DV 80.2 TL / DV 200.2 TL<br>8: DV 120.2 TL / DV 125.2 TL / DV 200.2 TL PW<br><b>Attention!</b> Only assignment list and machine sequences change – no parameters |
| 202      | Must be-tank temperature               | Parameters | 10 ... 80<br>(50 .. 176) | °C/°F | 60              | Standard for all the rinse programs on one appliance! Output dependent on definition.   |
| 203      | Pre-rinse time                         | Parameters | 0 ... 8                  | sec.  | 0               | See pre-rinse process step  |
| 204      | Rinse time                             | Parameters | 4 ... 30                 | sec.  | 5               | 5: FV 40.2<br>6: FV 60.2<br>Energizing duration for the pressure increasing pump (running time limited by P306!!)   |

| Par. No. | Configuration options             | Use as     | value range | Unit | Factory setting | Note  |
|----------|-----------------------------------|------------|-------------|------|-----------------|---|
| 205      | Indicator lamp                    | Parameters | 0 .. 8      | -    | 1               | Definition of the information which is to be switched via the potential-free contact<br>0 - no information<br>1 - Filling/Heating, ready for washing/washing or pumping out<br>2 - Filling/Heating, ready for washing/washing<br>3-Filling / Heating<br>4 - ready for washing<br>5 - Washing<br>6 - Draining<br>7 - Error<br>8 - Not status machine OFF and Draining<br>9 - Reserve<br>10- not status Machine OFF |
| 211      | Fine adjustment Rinse time        | Parameters | 0,0..0.9    | sec. | 0.7             | 0,7: FV 40.2<br>0,5: FV 60.2<br>Figures after the decimal point in P204   |
| 218      | Shortage of rinse aid             | Parameters | 0/1         |      | 0               | Monitoring Indication   |
| 219      | Shortage of detergent             | Parameters | 0/1         |      | 0               | Monitoring Indication   |
| 224      | Energizing mode Rinse agent pump. | Parameters | 0 .. 4      | -    | 1               | Definition: Energizing rinse aid pump:<br>0 - rinse pump = 0; no signal<br>1 - rinse aid pump; energizing according to calculated running time<br>2 - rinse aid pump = pressure increasing pump; energizing as pressure increasing pump<br>3 - rinse aid pump = wash pump; energizing as wash pump<br>4 - free  |
| 225      | Energizing mode Detergent pump    | Parameters | 0 .. 4      |      | 1               | Definition: Energizing detergent pump:<br>0 - Detergent pump; no signal<br>1 - Detergent pump; energizing according to calculated running time<br>2 - Detergent pump = pressure increasing pump; energize as pressure increasing pump<br>3 - Detergent pump = wash pump; energize as wash pump<br>4 - Option - detergent pump using negative pressure dosing  |
| 228      | Water softener incorporated?      | Parameters | 0/1         | -    | 0 or 1          | In case of incorporated water softener set to 1   |

| Par. No. | Configuration options                        | Use as     | value range   | Unit  | Factory setting | Note  |
|----------|--|------------|---------------|-------|-----------------|---|
| 240      | Load factory settings for configuration data | Parameters | 0/1           | -     | 0               | Effective only upon power supply reset ON/OFF<br><b>ATTENTION!</b> All changes to service parameters will be reversed.<br>Power supply reset must be carried out within 5 minutes, otherwise factory settings will not be loaded.<br>Without power supply reset, the information 123 will be displayed. |
| 241      | A0-value                                     | Parameters | 0 ...60       | -     | 0               | Only with disinfection machine no. 5 - 9 in parameter 201   |
| 321      | Rinse agent pump output                      | Parameters | 0.1 ...<br>10 | l/h   |                 | Rinse agent pump.<br>Output definition.   |
| 322      | Detergent pump output                        | Parameters | 0.1 ...<br>20 | l/h   |                 | Detergent pump<br>Output definition.  |
| 326      | Pipe vent time<br>Rinse agent                | Parameters | 0 ... 255     | sec.  |                 | Activate rinse agent pump temporarily to remove air from pipe.  |
| 327      | Pipe vent time<br>Detergent                  | Parameters | 0 ... 100     | sec.  |                 | Activate detergent pump temporarily to remove air from pipe.  |
| 347      | Disinfection temperature                     | Parameters | 10 ...80      | °C/°F | 0               | Only with disinfection machine no. 5 - 9 in parameter 201   |
| 348      | Disinfection temperature                     | Parameters | 0 ...900      | sec.  | 0               | Only with disinfection machine no. 5 - 9 in parameter 201   |

## 17.5 Assignment list View inputs / control outputs

| Indication |       | Input / output / other | Conditions                                   |               |
|------------|-------|------------------------|--|---------------|
| Left       | Right |                        |  |               |
| In         | 1     | 0/1                    | Door closed                                  | none          |
| In         | 2     | 0/1                    | Boiler level                                 | none          |
| In         | 3     | 0/1                    | Leak water switch floor                      | none          |
| In         | 4     | 0/1                    | not occupied                                 | none          |
| In         | 5     | 0/1                    | not occupied                                 | none          |
| In         | 6     | 0/1                    | not occupied                                 | none          |
| In         | 7     | 0/1                    | Hall-sensor ADT (vacuum dosing)              | none          |
| In         | 8     | 0/1                    | not occupied                                 | none          |
| In         | 9     | 0/1                    | not occupied                                 | none          |
| In         | 10    | 0/1                    | not occupied                                 | none          |
| In         | 12    | 0/1                    | not occupied                                 | none          |
| In         | 13    | 0/1                    | Threshold tank level. 1                      | none          |
| In         | 14    | 0/1                    | Threshold tank level. 2                      | none          |
| In         | 15    | 0/1                    | Threshold tank level. 3                      | none          |
| In         | 16    | 0/1                    | Tank level. 4 (Option)                       | none          |
| In         | 17    | 0 .. 255               | Without function                             | none          |
| In         | 18    | 0 .. 255               | Without function                             | none          |
| In         | 19    | xxx                    | Boiler temperature in °C or °F               | none          |
| In         | 20    | xxx                    | Tank temperature in °C or °F                 | none          |
| In         | 21    | xxx                    | Tank level (1 mm unit)                       | none          |
| In         | 22    | 0 .. 255               | Without function                             | none          |
| In7        | 9     | 0/1                    | Level switch in water softener inlet chamber | none          |
| In7        | 10    | 0/1                    | “No salt“ switch                             | none          |
| In7        | 18    | 0/1                    | not occupied                                 | none          |
| In7        | 19    | 0/1                    | not occupied                                 | none          |
| Ou         | 1     | 0/1                    | Wash pump                                    | No leak water |
| Ou         | 2     | 0/1                    | Booster Pump                                 | No leak water |
| Ou         | 3     | 0/1                    | Drain pump                                   | No leak water |
| Ou         | 4     | 0/1                    | Rinse aid – dosage pump                      | No leak water |
| Ou         | 5     | 0/1                    | Detergent – dosage pump / valve from ADT     | No leak water |
| Ou         | 6     | 0/1                    | Operation indicator                          | No leak water |
| Ou         | 7     | 0/1                    | Filling valve                                | No leak water |
| Ou         | 8     | 0/1                    | SASm soft starter system                     | No leak water |
| Ou         | 9     | 0/1                    | Boiler heating                               | No leak water |
| Ou         | 10    | 0/1                    | Tank heating                                 | No leak water |
| Ou         | 11    | 0/1                    | not occupied                                 | none          |
| Ou         | 12    | 0/1                    | not occupied                                 | none          |
| Ou7        | 4     | 0/1                    | Booster pump water softener                  | No leak water |
| Ou7        | 5     | 0/1                    | not occupied                                 | none          |
| Ou7        | 6     | 0/1                    | not occupied                                 | none          |
| Ou7        | 8     | 0/1                    | Solenoid valve Y2 EW                         | No leak water |
| Ou7        | 9     | 0/1                    | Solenoid valve Y3 EW                         | No leak water |
| Ou7        | 10    | 0/1                    | Solenoid valve Y4 EW                         | No leak water |
| Ou7        | 11    | 0/1                    | Solenoid valve Y5 EW                         | No leak water |
| Ou7        | 12    | 0/1                    | not occupied                                 | none          |

Leak water switch condition: Leak water switch must not have operated.

## 17.6 Rinse program parameter update: 01.05.2008

| Program no.: | Boiler temperature target value | Wash time target value |       |
|--------------|---------------------------------|------------------------|-------|
|              |                                 | Washing                | Total |
| 1            | 83                              | 71                     | 90    |
| 2            | 83                              | 101                    | 120   |
| 3            | 83                              | 221                    | 240   |
| 4            | 65                              | 71                     | 90    |
| 5            | 83                              | 141                    | 160   |
| 6            | 83                              | 161                    | 180   |
| 7            | 83                              | 191                    | 210   |
| 8            | 83                              | 341                    | 360   |
| 9            | 65                              | 101                    | 120   |
| 10           | 65                              | 141                    | 160   |
| 11           | 65                              | 161                    | 180   |
| 12           | 65                              | 191                    | 210   |
| 13           | 65                              | 221                    | 240   |
| 14           | 65                              | 341                    | 360   |



The dosage times will be adapted to the rinse time, so that the correct concentration remains if the rinse time is modified.

## 18 Operating errors

Despite being expertly designed, the machine may develop minor faults which are usually easy to eliminate. This section explains a number of possible problems and how you can deal with them yourself.



Before carrying out work on the open appliance, it **MUST** be disconnected from the power supply. The machine is to be switched off completely with the on-site power disconnection device here.

Should any of the operational faults described arise repeatedly, their cause must be established in each case.



Faults not described here can in general only be eliminated by a technician or electrician. Please contact the agency responsible or the authorised dealer.

## 18.1 Information reporting and troubleshooting

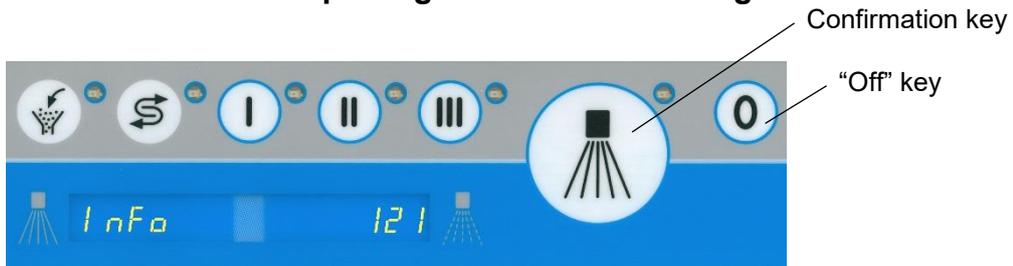


Figure 2: Information display

Information displays can be cleared by pressing the confirmation key.

Provided that the machine function is restored, the next program sequence will begin. The information display can also be deleted by pressing the "Off" key.

Information indicator (extract)

| Info No. | Description  | Possible cause   |
|----------|--|--|
| 120      | Emergency program active<br>Restricted washing possible. | No boiler / tank heating<br>No fresh water supply<br>Check system  |
| 121      | Door not closed  | Check connection S1<br>Change microswitch<br>Check microswitch adjustment<br>Replacing a defective I/O circuit board   |
| 122      | Incorrect password /<br>no authorization                 | Enter code once again  |
| 123      | Factory setting parameter list                           | Switch power supply ON/OFF within 5<br><br>and set parameters back<br>to factory settings. This will be<br>rejected and parameters will be re-<br><br>Information 123 will disappear |
| 126      | Maintenance required                                     | The set operating hours (P122) or batch<br>number (P123) has been reached. In-<br>form the service department and per-<br>form maintenance.<br>Reset the maintenance counter (P124)  |
| 420      | Shortage of rinse aid                                    | If the machine is ready for operation, a<br>shortage of rinse agent will be signalled<br>(only if there is a built-in warning sys-<br>tem).  |
| 520      | Shortage of detergent                                    | If the machine is ready for operation, a<br>shortage of detergent will be signalled<br>(only if there is a built-in warning sys-<br>tem).  |
| 521      | Shortage of detergent with dosing<br>system ADT          | Impulses of the flow meter are recog-<br>nized, although the detergent dosing is<br>not approached. Valve of the dosing unit<br>is not closing.                                      |
| 522      | Error in the dosing system ADT                           | Impulses of the flow meter are recog-<br>nized, although the detergent dosing is<br>not approached.<br>Valve of the dosing unit is not closing.                                      |

| Info No. | Description                                       | Possible cause   |
|----------|---|--|
| 720      | Regeneration in progress                          | Regeneration program has started and is in progress. (It is possible to pause the program, but not cancel it.)       |
| 721      | Regeneration is not possible as no salt available | Regeneration is necessary, but no brine available  |
| 722      | Refill with salt                                  | No brine available:<br>Check salt supply<br>No water in the salt solution reservoir.<br>Float switch S5 not working. |

Table 2: Information displays

## 18.2 Error messages and troubleshooting

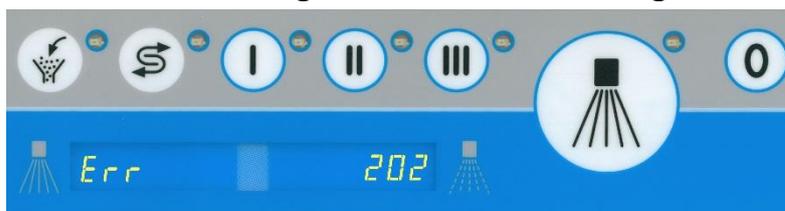


Figure 3: Error messages

Error messages will disappear automatically when the fault has been rectified.

Error messages (extract)

| ERR.-No. | Description   | Possible cause  |
|----------|---|---|
| 001      | EEPROM plug-in fault.   | EEPROM not available / incorrectly defective<br>Empty or incorrect EEPROM<br>Replace EEPROM with correct parameter set  |
| 111      | Floor pan leakage   | Leak inside the machine<br>Pump sump / motor /etc.<br>Defective leak water switch<br>Repair fault, remove water   |
| 201      | Level not reached during 1st filling  | Fresh water inlet insufficient (water faucet closed)<br>AquaStop hose kinked<br>Inlet filter soiled<br>AquaStop defective<br>Boiler switch defective  |
| 202      | Level not reached early enough during filling                                 | See 201   |
| 203      | No change detected by the level switch during emptying                        | Boost pump defective<br>Plug connector loosened<br>Start capacitor defective<br>Plug connector loosened<br>Plug connector loosened<br>Boiler level switch defective<br>No boost pump signal to - from input/output circuit boards<br>Check boost pump DSP / S2 using manual control |
| 204      | Following the end of rinse time, still no change detected at the level switch | See 203   |

| <b>ERR.-No.</b> | <b>Description</b>   | <b>Possible cause</b>   |
|-----------------|--|---|
| 205             | Temperature increase not reached   | Boiler heating defective / thermal fuse radiator<br>Temperature sensor defective, incorrect installation position<br>Boiler contactor defective, performance switch loosened<br>No signal from ON/OFF circuit boards  |
| 206             | Wash time increase   | Boiler not ready for rinsing early enough (boiler level/ boiler temperature)<br>Boiler heating defective / thermal fuse radiator<br>Temperature sensor defective<br>Boiler contactor defective, performance switch loosened<br>No signal from ON/OFF circuit boards               |
| 210             | Temperature sensor short circuit   | Check sensor cable (plug contacts)<br>Replace sensor<br>Install sensor correctly  |
| 211             | Temperature sensor interruption  | See 210   |
| 212             | Actual boiler temperature too high   | Contactor sticking<br>Incorrect sensor / defective sensor<br>Check sensor / cable (contact plug MIKE II XA5)  |
| 301             | Number of circulatory pumping cycles exceeded.<br>Tank level analysis disrupted<br>Tank level analysis disrupted | Booster pump yield too low<br>Rinse jets soiled<br>Air trap soiled<br>Booster pump rotor defective<br>Condensate in level pipe<br>Hose kinked / loose / not watertight  |
| 302             | When pumping out during rinse program, level does not fall below level 1.  | Fresh water supply insufficient (water faucet closed)<br>Drain pump soiled / defective<br>Rotor loose<br>Drain pump plug connector loose<br>Start capacitor defective<br>Tank level analysis disrupted<br>AquaStop not closing completely<br>No signal from ON/OFF circuit boards |
| 303             | Level does not fall below level 3 after time (drain pump ON)   | See 302   |
| 304             | Temperature increase not reached   | Tank heating defective / thermal fuse Radiator<br>Temperature sensor defective, incorrect installation position<br>Tank protection defective, performance switch loose  |
| 305             | Boiler content quantity insufficient for rinsing. Level 2 not reached  | See 301<br>Level switch defective<br>Plug connector loosened  |
| 306             | Tank level analysis disrupted<br>Tank level analysis disrupted   | Ventilation valve soiled<br>Check tank level<br>Level sensor air catch / check hose   |
| 307             | Tank level sensor defective  | Connection plug loosened<br>Sensor defective<br>Replace input/output circuit boards   |
| 310             | See 210  | See 210   |

| ERR.-No. | Description  | Possible cause   |
|----------|--|--|
| 311      | See 211  | See 211  |
| 312      | See 212  | See 212  |
| 701      | Intermediate water softener reservoir does not fill  | Water supply turned off<br>Water softener level switch is not operating or is defective<br>AquaStop valve Y1 defective   |
| 702      | Intermediate water softener reservoir does not empty | Booster pump in AktivClean actually overheated or defective<br>Valve in AktivClean not operating<br>Water softener level switch is not operating or is defective |

Table 3: Error messages

Should information or fault numbers not shown in the tables be indicated, or should the suggested measure not lead to the elimination of the fault, please notify a customer service technician.

## 19 Maintenance

Regular maintenance is a prerequisite for the long-term reliable and safe operation of a warewashing machine. Maintenance which is neglected or improperly carried out increases the residual risk of unforeseen damage to property and persons, for which no liability will then be assumed.

Maintenance work should only be conducted if the machine has been switched off completely via the on-site power disconnection device.

### Existing safety systems may not be removed!



A functional test on all safety systems of the machine / installation is carried out during every regular maintenance

We recommend that you take out a maintenance contract with our manufacturer's agent in order to ensure a long service life.

### 19.1 Basic safety measures during normal operation

Observe the maintenance periods prescribed in the operating instructions!

Observe the maintenance instructions given in these operating instructions for individual components!



Before carrying out any maintenance or repair work, prohibit access to the operating area to any unauthorized persons! Provide or display a sign drawing attention to the maintenance or repair work!



Before implementing any maintenance or repair work the machine must be switched off completely via the on-site power disconnection device and secured against reactivation by using appropriate measures (e.g. via a padlock whose key is in the possession of the person conducting the maintenance or repair work)! Failure to observe these precautions can result in severe physical injury or damage to property.



Before carrying out any maintenance and repair work, ensure that all the parts of the machine that may be touched have cooled down to room temperature!

Carefully dispose of any cleaning products that could harm the environment!

### **19.1.1 Before starting operations following maintenance or repair work**



Before starting operations following maintenance or repair work, all initial tests must be carried out as described in “Machine Settings for Initial Commissioning by the Service Engineer”.

### **19.1.2 Observe the environmental protection regulations**



Legal obligations relating to the avoidance of waste materials and to their recycling/removal in accordance with applicable regulations must be observed!

In particular, during installation, repair and maintenance work, materials that could pollute water such as: Grease and oils, Cleaning fluids containing solvents, must not pollute the ground or run into the sewerage system! These materials must be stored, shipped, collected and disposed of in suitable containers!

## **19.2 Dosing units**

The dosing units themselves are maintenance free in principle but the working life is largely dependent on the chemical used.

### **19.2.1 Change of products**

Change of product means that one rinse aid or detergent product is replaced by another. The use of differing products alongside each other can result in break-downs.

- Hose lines and dosing units must always be rinsed out with warm water.

## 19.3 Maintenance plan



### NOTE

Maintenance work should only be conducted by authorised MEIKO personnel.

| Maintenance procedures  | FV 28G / FV28GiO<br>EcoStar 430 F<br>EcoStar 530 F-M | FV 40.2 / FV 40.2 G<br>/FV 60.2 / FV 70.2 D<br>TopClean 60 | GK 60 | OR 50 H | EcoStar 545D /<br>DV 80.2 / DV 120.2 /<br>DV 125.2 / DV 200.2 /<br>DV 200.2 PW | DV 270 B | FV 130.2 – FV<br>250.2 / DV 270.2 | Component OK | Component faulty     | Component re- |
|---|--|--|-------|---------|--|----------|-----------------------------------|--------------|----------------------|---------------|
| <b>1. Pumps</b>   |  |  |       |         |  |          |                                   |              |                      |               |
| Check pumps for watertightness, pump rotor noise, rotation direction and function                                 |  |  |       |         |  |          |                                   |              |                      |               |
| Check pump suction  |  |  |       |         |  |          |                                   |              |                      |               |
| Check pump sieves correctly fitting and operating correctly   |  |  |       |         |  |          |                                   |              |                      |               |
| Check sliding ring washer/contra-rotation ring  |  |  |       |         |  |          |                                   |              |                      |               |
| <b>2. Wash systems</b>  |  |  |       |         |  |          |                                   |              |                      |               |
| Check water level in tank   |  |  |       |         |  |          |                                   |              |                      |               |
| Check that wash water pipe is watertight  |  |  |       |         |  |          |                                   |              |                      |               |
| Check washing system is complete and produces correct spray pattern   |  |  |       |         |  |          |                                   |              |                      |               |
| Check wash arm hubs   |  |  |       |         |  |          |                                   |              |                      |               |
| <b>3. Fresh water rinse</b>   |  |  |       |         |  |          |                                   |              |                      |               |
| Check flow pressure/water pressure  |  |  |       |         |  |          |                                   |              |                      |               |
| Check rinsing system is complete and produces correct spray pattern   |  |  |       |         |  |          |                                   |              |                      |               |
| Check that system is watertight   |  |  |       |         |  |          |                                   |              |                      |               |
| <b>4. Housing and mounting parts</b>  |  |  |       |         |  |          |                                   |              |                      |               |
| Check housing, tank, sheet metal cover, hood, doors and covering of machine base for damage and correct operation |  |  |       |         |  |          |                                   |              |                      |               |
| Check tank cover sieves   |  |  |       |         |  |          |                                   |              |                      |               |
| Check boiler, hoses, clamps, plastic parts and seals  |  |  |       |         |  |          |                                   |              |                      |               |
| Check operation of raising and lowering equipment   |  |  |       |         |  |          |                                   |              |                      |               |
| <b>5. Fresh water installation</b>  |  |  |       |         |  |          |                                   |              |                      |               |
| Check level regulation  |  |  |       |         |  |          |                                   |              |                      |               |
| Check valves, clean dirt trap   |  |  |       |         |  |          |                                   |              |                      |               |
| Check that all connections (incl. hand spray) are watertight  |  |  |       |         |  |          |                                   |              |                      |               |
| Check settings of built-in water softener (if fitted)   |  |  |       |         |  |          |                                   |              |                      |               |
| Check operation of complete or partial water softener (if fitted)   |  |  |       |         |  |          |                                   |              |                      |               |
| <b>For the GiO module:</b> Perform pre-filter change (must be completed every 6 months at the latest)             |  |  |       |         |  |          |                                   |              |                      |               |
| Check water hardness  |  |  |       |         |  |          |                                   |              |                      |               |
| Check the free discharge section for cleanliness and tightness of the connections (visual check)                  |  |  |       |         |  |          |                                   |              | at least once a year |               |
| <b>6. Waste water equipment</b>   |  |  |       |         |  |          |                                   |              |                      |               |
| Check if watertight   |  |  |       |         |  |          |                                   |              |                      |               |
| Check pressure hose position and operation of drain pump  |  |  |       |         |  |          |                                   |              |                      |               |

| Maintenance procedures                                      | FV 28G / FV28GIO | FV 40.2 / FV 40.2 G  | GK 60 | OR 50 H | EcoStar 545D /        | DV 270 B | FV 130.2 – FV    | Component OK | Component faulty | Component re-        |
|---|------------------|----------------------|-------|---------|-----------------------|----------|------------------|--------------|------------------|----------------------|
|   | EcoStar 430 F    | /FV 60.2 / FV 70.2 D |       |         | DV 80.2 / DV 120.2 /  |          | 250.2 / DV 270.2 |              |                  |                      |
|   | EcoStar 530 F-M  | TopClean 60          |       |         | DV 125.2 / DV 200.2 / |          |                  |              |                  |                      |
|   |                  |                      |       |         | DV 200.2 PW           |          |                  |              |                  |                      |
| <b>7. Electrical safety check (certificate is optional)</b> |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Visual inspection   |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Protective conductor check                                  |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Measure insulation resistance                               |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Protection conductor current measurement                    |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
|   |                  |                      |       |         |                       |          |                  |              |                  |                      |
| <b>8. Detergent dosing</b>                                  |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Replace peristaltic hose and seals on the nozzles           |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Check detergent dosing system is working and not leaking    |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Check dosage, adjust if necessary                           |                  |                      |       |         |                       |          |                  |              |                  |                      |
|   |                  |                      |       |         |                       |          |                  |              |                  |                      |
| <b>9. Rinse aid dosing</b>                                  |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Replace peristaltic hose and seals on the nozzles           |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Check rinse aid dosing system is working and not leaking    |                  |                      |       |         |                       |          |                  |              |                  | at least once a year |
| Check dosage, adjust if necessary                           |                  |                      |       |         |                       |          |                  |              |                  |                      |
|   |                  |                      |       |         |                       |          |                  |              |                  |                      |
| <b>10. Operation check of the complete machine</b>          |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Check machine for correct interaction of all functions      |                  |                      |       |         |                       |          |                  |              |                  |                      |
|   |                  |                      |       |         |                       |          |                  |              |                  |                      |
| <b>11. Test run</b>   |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Check results of test wash and rinse                        |                  |                      |       |         |                       |          |                  |              |                  |                      |
| Brief instruction for new personnel                         |                  |                      |       |         |                       |          |                  |              |                  |                      |

## 20 Dismantling and disposal

In addition to valuable raw materials and recyclable materials, the packaging and the old device may also contain substances that are harmful to health and the environment and were required for the function and safety of the old device.

Please do not dispose of your old device in residual waste. Instead, contact your dealer or the collection points set up in your community for information regarding the disposal of your old device.

### 20.1 Disposal of packaging materials

All the packaging materials are recyclable. The following materials are used:

- Square timber frame
- Plastic sheeting (PE film)
- Cardboard packaging (edge protection)
- Packaging strap (steel strip)
- Packaging strap (plastic (PP))



#### Note

The square timber frame consists of untreated raw pine / spruce. In order to guard against pests, country-specific import regulations may also stipulate the use of treated wood.

### 20.2 Dismantling and disposal of the old device

#### Warning

##### Risk of injury from contact with chemicals

Detergent and rinse aid result in damage to health if in contact with skin or eyes or if swallowed.

- Use eye protection.
  - Wear protective gloves.
  - Contact a physician immediately if chemicals or water containing chemicals (wash water) are swallowed.
- 
- Where appropriate, rinse machine components, containers, dosing units and hoses with fresh water to remove chemical residues. Wear suitable clothes (gloves, safety glasses) for this.



The device is marked with this symbol. Please observe the local regulations for proper disposal of your old device.

The components should be separated by material for recycling.

When disposing of the old appliance, the battery contained in the control system must be removed and disposed of separately.

## 21 Documentation

Installation drawing / technical sheet

Technical Data

Wiring diagram / Programming instructions



The clean solution



**MEIKO Maschinenbau GmbH & Co. KG**

Englerstraße 3

77652 Offenburg

Germany

[www.meiko-global.com](http://www.meiko-global.com)

[info@meiko-global.com](mailto:info@meiko-global.com)