

# MEIKO<sup>®</sup> ACTIVE

## D-AM 1310 ALU

Highly concentrated liquid warewashing detergent with soft metal protection



- NTA-, EDTA-, chlorine- and phosphate-free
- specially formulated to wash soft metal utensils
- provides clean, sparkling results
- guarantees one-pass cleaning results
- for soft and medium hard water



**Instructions for use:**

**MEIKO ACTIVE D-AM 1310 ALU** is used with a dosing unit. The dosage is determined by water hardness, time to wash, soil level, type of dishwashing machine and tableware etc.

**Recommended dosage:**

2,0 – 4,0 g/l water

**Special information!**

In case of a product switch, a service technician needs to attend. Before the first use of a new product type, always rinse dosing line with clean water to avoid any build-up of crystallisation. Do not mix with any other products!

**Composition and Detergents Regulation information**

Please see safety data sheet.

**Storage conditions**

Store separated from acids. Store between 0 and 40°C.

**Safety information**


For professional use only. For further information and safety instructions, see product label and safety data sheet.

**Recommended Rinse Aid**

MEIKO ACTIVE R-UH 2890

**Recommended positioning:**

**Time to wash**

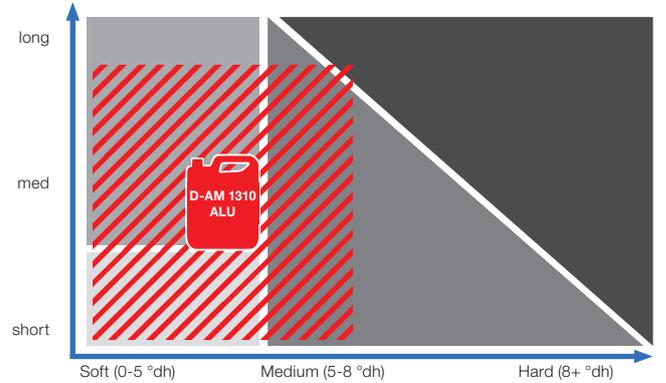

**Dishwashing conditions**



**pH value (undiluted)**

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----



For safety advice please visit:  
<https://m3o.link/uSk>

**Sales unit**

Jerry can 25 kg  
Jerry can 12 kg

**Order number**

9019794  
9018988



**UFI:** VYGF-688X-2G0U-VMAT

