

# MEIKO<sup>®</sup> ACTIVE

## D-UH 1890

Universal highly concentrated liquid  
warewashing detergent suitable for  
hard water conditions



- NTA-, EDTA-, phosphate and chlorine-free
- highly effective even on toughest soil
- provides clean, sparkling results
- guarantees one-pass cleaning results
- effectively binds water hardness



# MEIKO ACTIVE

**GB** Machine Warewashing Detergent  
**D** Reiniger für Geschirrspülmaschinen  
**F** Détergent pour le lavage de la vaisselle en machine  
**NL** Vaatwasproduct  
**S** Maskindiskmedel  
**FIN** Koneastianpesuaine  
**DK** Maskinopvaskemiddel  
**N** Maskinoppvaskmiddel  
**I** Detergente per macchine lavastoviglie  
**E** Detergente para máquinas lavavajillas  
**P** Detergente para lavagem mecânica de louça  
pottery  
**GR** Απορρυπαντικό για αυτόματα πλυντήρια πιάτων/  
pottery  
**TR** Endüstriyel bulaşık makineleri için deterjan

25 kg



**Instructions for use:**

**MEIKO ACTIVE D-UH 1890** is used with a dosing unit. The dosage is determined by water hardness, time to wash, soil level, type of dishwashing machine and tableware etc.

**Recommended dosage:**

2,0 – 4,0+ g/l water

**Special information!**

In case of a product switch, a service technician needs to attend. Before the first use of a new product type, always rinse dosing line with clean water to avoid any build-up of crystallisation. Not for use on aluminium and other soft metals. Do not mix with any other products!

**Composition and Detergents Regulation information**

Please see safety data sheet.

**Storage conditions**

Store separated from acids. Store between 0 and 40°C.

**Safety information**

For professional use only. For further information and safety instructions, see product label and safety data sheet.


**Recommended Rinse Aid**

MEIKO ACTIVE R-UH 2890

MEIKO ACTIVE R-PM 2690 PL (if mainly plastic ware)

**Recommended positioning:**

**Time to wash**

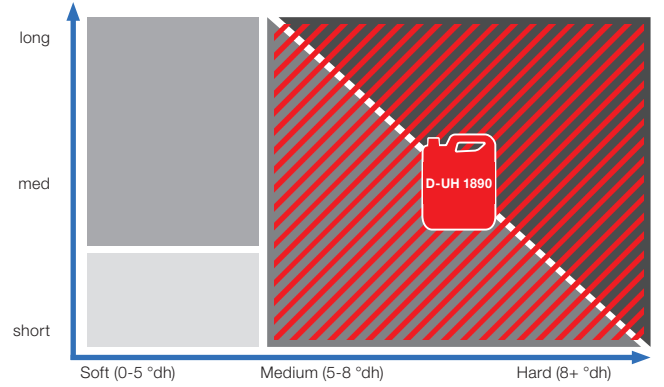

**Dishwashing conditions**



**pH value (undiluted)**

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----



For safety advice please visit:  
<https://m3o.link/uSi>

**Sales unit**

Jerry can 25 kg  
Jerry can 12 kg  
Jerry can 6 kg

**Order number**

9018985  
9018984  
9018983



**UFI:** DH6Y-H3XY-VG07-096N

