

MEIKO[®] ACTIVE

R-US 2190

Universal highly concentrated rinse additive for soft water conditions



- provides clean, sparkling results
- ensures fast drying of tableware
- for soft water
- the de-foaming formulation increases machine efficiency
- highly concentrated formula gives very low in-use cost



Instructions for use:

MEIKO ACTIVE R-US 2190 is used with a dosing unit. The dosage is determined by water hardness, tableware, type of dishwashing machine etc.

Recommended dosage

0,1 – 0,4 ml/l water

Special information!

In case of a product switch, a service technician needs to attend. Before the first use of a new product type, always rinse dosing line with clean water to avoid any build-up of crystallisation. Do not mix with any other products!

Composition and Detergents Regulation information

Please see safety data sheet.

Storage conditions

Store between 0 and 40 °C.

Safety information


For professional use only. For further information and safety instructions, see product label and safety data sheet.

Recommended Detergent

MEIKO ACTIVE D-US 1190

Recommended positioning:

Materials to rinse

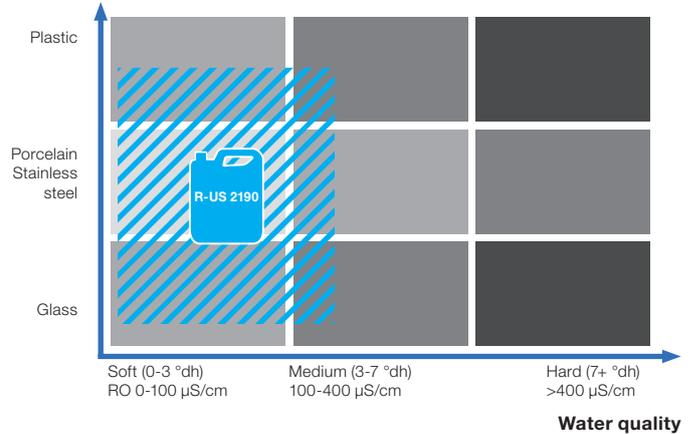

Dishwashing conditions



pH value (undiluted)



For safety advice please visit:
<https://m3o.link/uSo>

Sales unit

Jerry can 10L
Jerry can 6L

Order number

9018992
9018991



UFI: 9FVN-98SY-JG02-9SM6

