



KA Series

The incredibly versatile rack-conveyor dishwasher

Modular design that solves kitchen space problems



MEIKO's *unique* KA Series dishwasher offers an optional 90° unloader/blower dryer module

KA SERIES | Discover the clean solution

From its founding in Germany nearly 100 years ago, MEIKO has become an industry-leading global brand in professional warewashing, sanitizing and disinfection technology.

In 80 countries around the world, MEIKO products are everywhere food is served. We design and build advanced, high-quality, environmentally friendly warewashing equipment in every size and application.

From undercounter dishwashers to the largest flight-types and rack-conveyors...

MEIKO commercial dishwashers are truly in a class of their own.

m
MEIKO

Your clean solution starts here

Today's commercial warewashing market offers many choices. But only MEIKO delivers superior performance *and* exceptional value.

KA is available in single-tank, and multi-tank sizes. That means you can configure the exact model that meets the needs of your commercial kitchen.

Advanced technology with a smart design makes the KA Series economical, reliable and easy to use. Its sustainable design is the most efficient in the industry, conserving water, energy and chemicals for savings that can improve your bottom line.

Standard features

- Glass touchscreen control panel featuring color graphics and plain text that's easy to understand.
- Built-in "smart" booster heater ensures the correct sanitizing temperature of 180°F/82°C (based on an incoming water temperature of 110°-140°F/43°-60°C).
- Double-wall construction provides extra insulation to keep the KA cool to the touch. It also conserves heating energy and reduces noise for a cooler, quieter working environment.
- Simplified service diagnostics, error logging, troubleshooting and real-time performance updates are all quickly and easily available.
- Strong, durable, easy-to-clean 304-grade stainless steel construction.
- Wash arms are engineered to provide a high level of washing dynamics (with a powerful 3 hp pump) that food soils and grease just can't hide from.
- Sealed, hinged access door(s) are field-reversible by a MEIKO Service Pro, providing versatility that can help optimize your kitchen's workflow.
- Three conveyor speeds to handle most soil loads.



Modular design with different models to choose from

KA SERIES | Take a closer look



Protecting the environment through **incredible water savings**



Improving your bottom line with **sustainable energy efficiency**



Intuitive, easy operation with **advanced controls**



Building the best system by always **keeping operators in mind**



Solving space issues with a **versatile, modular design**



Clearance height of 20" (508 mm) accommodates standard sheet pans

Note: Tabling shown purchased separately.

The difference is clear

KA offers sophisticated technology in a beautiful, easy-to-use package. The multi-lingual glass touch screen control panel provides fully automatic operation and advanced service diagnostics.

Messages are displayed in plain text. Choose from English, Spanish, French and other languages.

The high-contrast, illuminated color display provides accurate, up-to-date information at every stage of the washing process to keep operators informed.

All key information is available at a glance, and a constant stream of data can be maintained between the machine and its operators. Monitor important metrics using Bluetooth-compatible Android devices (including phones, laptops and tablets) via the MEIKO Connect app.

Only functions that are in progress or are available for selection are displayed, effectively eliminating the opportunity for operator error to occur.



Simple, one-touch operation makes it easy to navigate through the program options.



Filling/Heating



Cycle Pause



Ready for Operation



Drop-down Menu



In Operation

Performance Data

Single-Tank

- KA 44/66, KA 54
- 71 GPH
- 243 racks per hour
- 0.29 gallons (1.11 liters) per rack
- Conveyor speed 6.75 feet (2.01 meters) minute

Multi-Tank

- KA 64/86
- 86 GPH
- 355 racks per hour
- 0.24 gallons (0.92 liters) per rack
- Conveyor speed 9.88 feet (3.01 meters) minute

Optional features

- MEIKO's *unique* 90° unloader/blower-dryer module
- 90° loaders/unloaders
- Waste Air Heat Recovery System (WAHRS)
- High-efficiency blower-dryer module
- Single-point electrical connection (*available on select models*)


Optional WAHRS: Waste Air Heat Recovery System

MEIKO's award-winning Waste Air Heat Recovery System reclaims and reuses heat generated by the machine, reducing energy consumption while allowing hot-water sanitization from a cold-water supply. It also helps maintain optimal indoor air quality.

Optional Blower-Dryer Unit

For fast drying and less time dealing with wet or spotted wares, MEIKO's innovative blower-dryer unit combines a single blower with electric heaters to vastly improve drying. It uses just 3.6-4.5 kW of heating energy.*

Only the modular-designed KA has nine models to choose from, **and** offers the optional 90° unloader/blower-dryer module so you can create the ideal configuration for your facility.

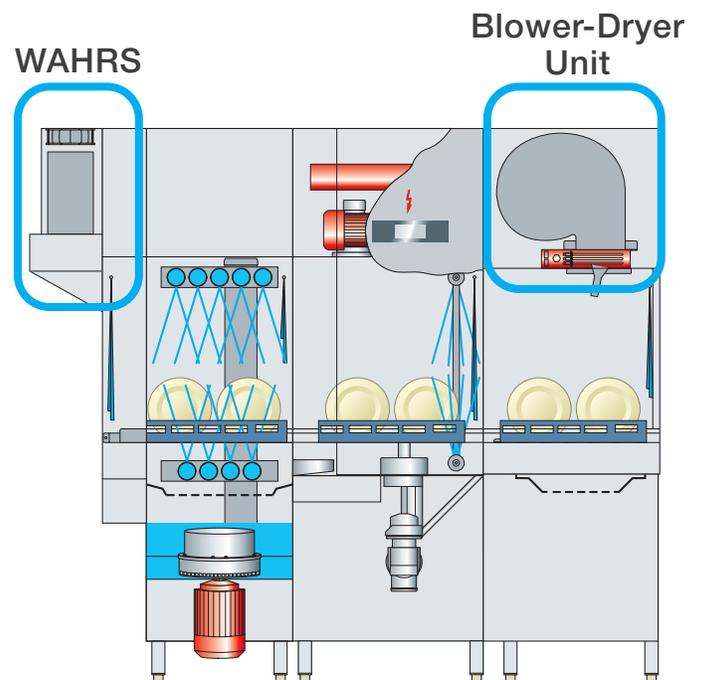

*Depending on the operating voltage

MEIKO's "Blue Cues"

Make clean-up fast and easy

MEIKO's "Blue Cues" operating concept takes the guesswork out of cleaning. That helps improve workflow, which can also increase speed between staff and machine. Operators can quickly and easily recognize, remove, and clean all the critical components that are marked in blue.

KA filters are easy to locate and simple to clean. In fact, all KA parts, including the computer-designed, wash and rinse arms are easy to remove and replace. Our smart design even features tethered end caps so they don't get lost.




Sales and service you can count on

Our team of expert Sales professionals can make recommendations and help configure the perfect system for your facility. Our Service team can provide preventive maintenance and service to keep it running smoothly and reliably for years to come. MEIKO provides exceptional levels of service both before, and after the sale, for the highest levels of customer satisfaction.

Take the next step


Learn more about how the KA Series from MEIKO can make your operation more profitable, faster and more efficient. **Call us at +52 55 41722551 MEIKO.**

KA-44/66 Single-Tank Models Sectional View

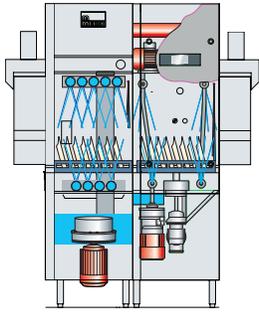

KA-44


DIMENSIONS: 44"L x 76-1/8"H x 31-1/4"D
(1,118 mm x 1,934 mm x 795 mm).

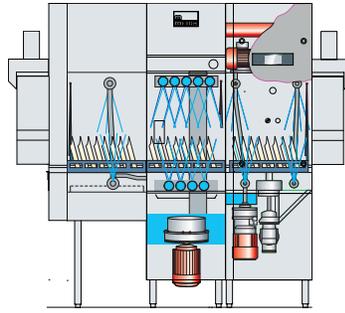

KA-66

DIMENSIONS: 66"L x 76-1/8"H x 31-1/4"D
(1,676 mm x 1,934 mm x 795 mm).


KA-54 Single-Tank Model Sectional View

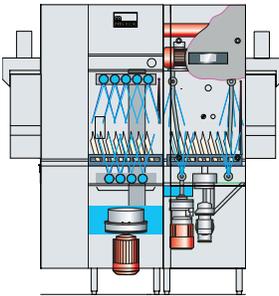

KA-54


DIMENSIONS: 54"L x 76-1/8"H x 31-1/4"D
(1,372 mm x 1,934 mm x 795 mm).

KA-64/86 Multiple-Tank Models Sectional View

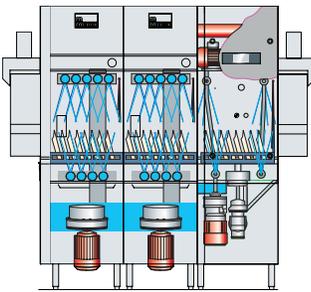

KA-64

DIMENSIONS: 64"L x 76-1/8"H x 31-1/4"D
(1,626 mm x 1,934 mm x 795 mm).

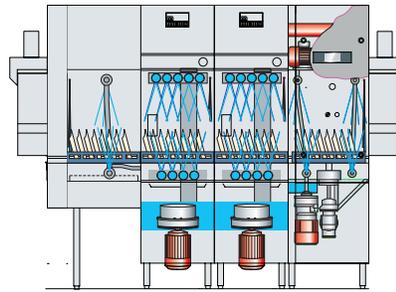

KA-86

DIMENSIONS: 86"L x 76-1/8"H x 31-1/4"D
(2,184 mm x 1,934 mm x 795 mm).

NOTES:

- Optional blower dryer adds 23-5/8" (600 mm) to length.
- Optional WAHRS adds 2" (51 mm) to height.
- Control panel adds 1-5/8" (41 mm) to dimension D.
- Dryer/unloader combo adds 34-1/4" (870 mm) to length and 6-1/8" (155 mm) to depth.

MEIKO Clean Solutions Mexico S. de R.L. de C.V.
Av. Santa Fe No. 170, Oficina 6-2-24K · Col. Santa Fe · 01376 Ciudad de México
Tfno. +52 55 41722551 · info@meiko-mexico.com · www.meiko-mexico.com

Fabricante:
MEIKO Maschinenbau GmbH & Co. KG · Englerstr. 3 · 77652 Offenburg, Alemania
Tfno. +49 781 203-0 · info@meiko-global.com · www.meiko-global.com

MEIKO[®]
ACTIVE



MEIKO recomienda para unos resultados de lavado convincentes e higiénicamente sostenibles los productos higiénicos de **MEIKO ACTIVE**.

