

UPster H1000

■ 双筐揭盖式洗碗机

■ Hood Type Double Baskets Dishwasher



The Clean Solution

填补了普通揭盖式器和篮传送式洗碗机之间的空白。相同洗涤循环时间，双倍洗涤量。特别适合清洗器具及碗碟，让洗碗变得更轻松、更便捷。

It is the "missing link" between single-basket hood type dishwashers and even more powerful rack type dishwashing machines. Despite offering twice the level of performance, the wash cycle times remain unchanged. And if you're ever faced with a really bulky item of washware, this hood type dishwasher can easily accommodate it in the two baskets placed next to each other.



优势 Performances



高效

双层不锈钢罩式结构：降低噪音，外罩保持35℃，降低能源消耗。

Double wall construction of machine body and hood: acts as noise dampers, reduces outer machine surface temperature to 35℃ and saves energy.



节能

超短待机加热时间，提高运行效率。源于独特的设计理念。

Short heating time improves the running efficiency of the machine which roots in the unique concept of design.



环保

ECO过滤器与洗涤槽筛网的有机结合，使水泵获得最有效的保护；排水口自带滤网，优化过滤效果。

ECO-filter and wash tank cover sieve, best washing pump protection, built-in drain sieve optimum filtering of suds.



便捷

Air Gap进水装置及独立的漂洗水泵，可防止溢流，确保机器在超低水压条件下仍能正常工作。

The Air Gap water device and the independent rinsing pump can prevent overflow and ensure that the machine can work under low water pressure conditions.



优质

漂洗加热器使用超高品质的316不锈钢材质，更久抗腐蚀性。

Rinse booster is made from high-quality heater 316 stainless steel, more corrosion resistance.

特点 Features

倾斜式内顶盖：防止残余的洗涤液滴落在干净的盘碟上。

Sloping inner machine hood ceiling: prevents suds from dripping onto clean dishes after final rinsing.

高效旋转式洗涤和漂洗臂设计：充分利用了水泵压力并降低洗涤用水量（2.5升/篮）。

Super-efficient rotating wash and final rinse arm design: allows for reduced pump pressure and lower water consumption per basket (2.5 liter / basket).

3档洗涤循环时间选择：适应于不同的洗涤要求。

Choice of 3 washing cycle times: ensures perfect results, regardless of the soil level of the dishes.

软启动功能：保证机器平滑运转，有效避免餐具被冲翻。

Soft start system—washing with protection of delicate glassware and crockery.

数字温度实时显示控制面板，先进的MIKE I控制系统可在现场通过无线连接进行故障诊断，以保证更方便快捷的售货服务。模块化电路板，可靠性及通用性更强。

Digital Temperature Control display, Mike-I control system with integrated infrared interface, can guarantee first-class service. Modular control board, easy assembly and repair, flexible arrangement and use.

主要适用场所 Suitable for

- 餐馆，酒楼酒店，员工食堂。
Restaurants, Hotels and Staff Canteens.


UPster H1000

■ 双筐揭盖式洗碗机

■ Hood Type Double Baskets Dishwasher

迈科洗碗机—专业人士的共同选择！

UPster H1000总体尺寸与主要技术参数 Detail Specifications and Main Technical Data for UPster H1000

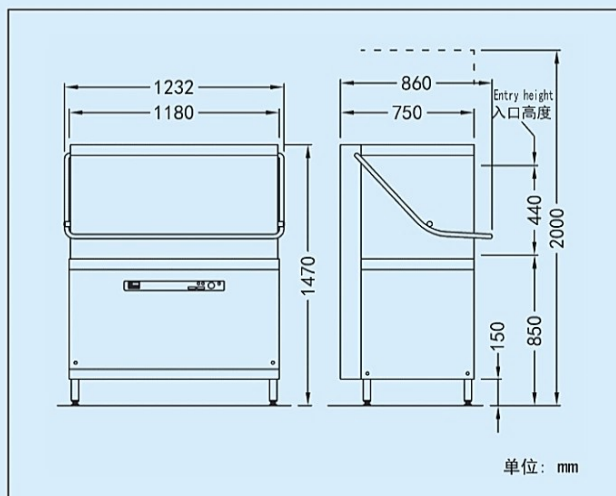

技术参数 Technical Data	UPster H1000
机器总体尺寸 (毫米) Machine dimensions (mm)	1180*750*1470
洗涤篮规格 (毫米) Basket dimensions (mm)	500*500 (2篮)
洗涤能力 (篮/小时) Basket per hour (basket/hour)	120
洗涤水泵功率 (千瓦) Basket pump motor (KW)	0.75*2
漂洗水泵功率 (千瓦) Rinse pump motor (KW)	0.55
水槽容量 (升) Tank volume (Liter)	45
漂洗用水量 (升/循环) Rinse water quantity (Liter/cycle)	5
水槽加热器功率 (千瓦) Tank heater (KW)	4.0
漂洗加热器功率 (千瓦) Booster heater (KW)	24
Air gap水箱容量 (升) Air gap tank volume (Liter)	7
漂洗加热器容量 (升) Rinse heater volume (Liter)	19
总功率 (千瓦) Total connected load (KW)	29.5

标准配置 Standard Features

- 预设60/90/210秒洗涤循环。
Pre-set 60/90/210 seconds program cycle.
- 数字温度实时显示。
Digital temperature indicators.
- 电漂洗加热器。
Electrical booster.
- 排水口自带滤网。
Built-in drain sieve.
- 自动清洗功能。
Self-cleaning programme.
- 双层隔热不锈钢门结构。
Double wall construction with door.
- 进水电磁阀自带过滤网。
Inlet solenoid valve with built-in filter sieve.

选装件 Optional Accessories

- 排水泵；催干剂分配器。
Drain Pump; Rinse aid dosing.
- 不锈钢台面、塑料洗涤篮。
Stainless steel tables, plastic baskets.
- 花洒龙头。
Faucet.

水电安装注意事项 Electric and Water Installation Requirement

- 进水压力：0.06–0.5MPa，安装规范请参照产品说明书。
Water pressure should between 0.06 and 0.5 MPa, the installation requirement please refer to our product manual.
- 进水管尺寸DN20，排水管尺寸DN50。
Inlet water pipe diameter should be DN20, outlet water pipe diameter should be DN50.
- 电力安装需三相五线/380V/50Hz，按照相关国家标准加装漏电保护开关，电源线要求不小于16平方毫米。
Standard electricity: three-phase, NE, 380V, 50Hz, electricity leaking protection switch should be installed according to the related national standard.



迈科清洗科技（中山）有限公司
MEIKO Wash-Up Technologies Ltd.
地址：广东省中山市火炬高新技术开发区敬业路2号
电话：0760-85317590、85317591 邮编：528437
传真：0760-85317286
网址：www.meiko.de www.meikochina.com



请联系我们的经销商/Please contact our dealer in China: