

# MEIKO<sup>®</sup> ACTIVE

## R-UH 2890

Universal concentrated acidic rinse additive for all water conditions



- provides clean, sparkling results
- ensures fast drying of tableware
- suitable also for difficult water conditions
- the de-foaming formulation increases machine efficiency
- highly concentrated formula gives very low in-use cost



**Instructions for use:**

**MEIKO ACTIVE R-UH 2890** is used with a dosing unit. The dosage is determined by water hardness, tableware, type of dishwashing machine etc.

**Recommended dosage**

0,1 – 0,4 ml/l water

**Special information!**

In case of a product switch, a service technician needs to attend. Before the first use of a new product type, always rinse dosing line with clean water to avoid any build-up of crystallisation. The product is not suitable for tableware made from polycarbonate or copper! Do not mix with any other products!

**Composition and Detergents Regulation information**

Please see safety data sheet.

**Storage conditions**

Store between 0 and 40 °C.

**Safety information**

For professional use only. For further information and safety instructions, see product label and safety data sheet.

**Recommended Detergent**

- MEIKO ACTIVE D-US 1110
- MEIKO ACTIVE D-US 1190
- MEIKO ACTIVE D-UH 1890
- MEIKO ACTIVE D-AM 1310 ALU (*if soft metal ware*)




For safety advice please visit:  
<https://m3o.link/uSp>


Responsible:  
**MEIKO Maschinenbau GmbH & Co. KG** · Englerstr. 3 · 77652 Offenburg, Germany  
Tel. +49 781 203 1717 · [chemicals@meiko-global.com](mailto:chemicals@meiko-global.com) · [www.meiko-global.com](http://www.meiko-global.com)

**Recommended positioning:**

**Materials to rinse**

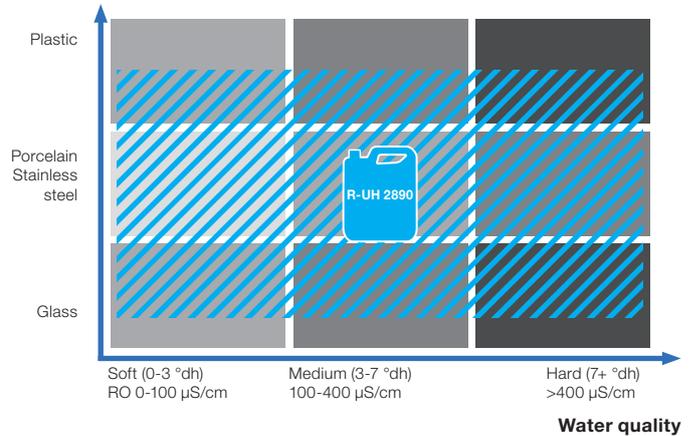

**Dishwashing conditions**

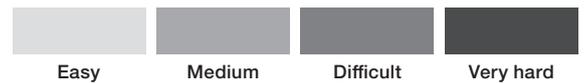

**pH value (undiluted)**

|   |   |   |   |   |   |   |   |   |    |    |    |    |    |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|

**Sales unit**

- Jerry can 20L
- Jerry can 10L
- Jerry can 6L

**Order number**

- 9019807
- 9018994
- 9018993



**UFI: Q9AN-28RK-9G03-0H29**

