

Professional warewashing technology



Discover 5-Star Clean

Sustainable, premium warewashing technology

Performance and reliability:

By land, air and sea, we're making
the world a cleaner place.



MEIKO quality:

Recognized around the world, our dishwashers minimize the use of water, energy and chemicals – all while delivering clean like you've never seen.

M-iClean U with *ComfortAir* technology

The world's best undercounter dishwashers



When we say “comfort,” we mean it. Tight kitchens in smaller spaces need cooler working environments.

MEIKO's *ComfortAir* technology reduces steam by up to 80% for incredibly fast drying time. Moisture on dishes is reduced by as much 98%, and up to 75% on glassware – to virtually eliminate spotting and hand-polishing.

You'll get brilliant clean that saves time and labor, with a cooler working environment. And all fresh-water rinse components are isolated, to keep them completely separate from wash-water components.

M-iClean U Series Features

- *ComfortAir* heat-recovery system means:
 - No visible vapor emissions when you open the door!
 - Incredibly dry results.
 - Steam inside the machine is recaptured and reused as a heating source, conserving energy and reducing heating time, to save time and money.
- Choose the optional '*Private-Label*' package to have your logo featured on your *M-iClean U* display.
- The truly ventless design of *M-iClean U* with *ComfortAir* keeps it cool to the touch on the outside, great for close quarters!
- Double-wall construction improves energy efficiency and reduces noise.
- MEIKO's “**Blue Cues**” operating concept means staff can quickly and easily recognize, remove and clean all components marked in blue.

M-iClean US



Comfort options:

- MEIKO *ComfortAir* heat recovery system
- MEIKO *GiO MODULE* technology
- Water change program

Entry height

H 315 mm

Dimensions

H 700-735 mm, W 460 mm,
D 600 mm

Rack dimensions

400 x 400 mm

Rack capacity

up to 40 racks / hour

M-iClean UM



Comfort options:

- MEIKO *ComfortAir* heat recovery system
- MEIKO *GiO MODULE* technology
- Water change program
- Final rinse with cold water

Entry height

H 315 mm

Dimensions

H 700-735 mm, W 600 mm,
D 600 mm

Rack dimensions

500 x 500 mm

Rack capacity

up to 40 racks / hour

M-iClean UM+



Comfort options:

- MEIKO *ComfortAir* heat recovery system
- MEIKO *GiO MODULE* technology
- Water change program

Entry height

H 435 mm

Dimensions

H 820-855 mm, W 600 mm,
D 600 mm

Rack dimensions

500 x 500 mm

Rack capacity

up to 40 racks / hour

M-iClean UL



Comfort options:

- MEIKO *ComfortAir* heat recovery system
- MEIKO *GiO MODULE* technology
- Water change program

Entry height

H 435 mm

Dimensions

H 820-855 mm, W 600 mm,
D 680 mm

Rack dimensions

500 x 500 mm

to 600 x 500 mm

Rack capacity

up to 40 racks / hour

M-iClean U: 5-Star Clean from MEIKO



So small and yet so powerful.

M-iClean U undercounter dishwashers offer powerful, sustainable cleaning technology, easy operation and economical performance – all in a compact, beautifully designed package.



Make it your own with MEIKO's *Private Label* feature.

Personalize the beautiful glass color welcome screen with your own logo. Up to three additional images can be stored to use as screen savers.



Integrated design is convenient.

Blue cues make it easy.

M-iClean U has an all-in-one combined wash and rinse arm with monitoring sensors.



If only everything was this simple!

- Bright-colored LED lights show the machine's status from across the galley.
- One-touch display shows all key information.
- Choose from variable cycle times and pressures for a perfect wash, every time.



M-iClean U saves water and energy.

- Its intelligent energy management system senses when the machine is idle and gradually shifts into standby mode.
- The active M-iClean U filter removes dirt so effectively it actually reduces the amounts of detergent and clean water needed.
- Wash programs are specially designed for different types of wares to help users to economize.




Sail away from drain blockages.

Easily access the M-iClean U's drain pump from inside the machine to quickly remove any obstructions that could impede the wash cycle.



Computer-designed wash-and-rinse arms combined with focused spray patterns ensure maximum cleanliness on every surface of any type of ware.

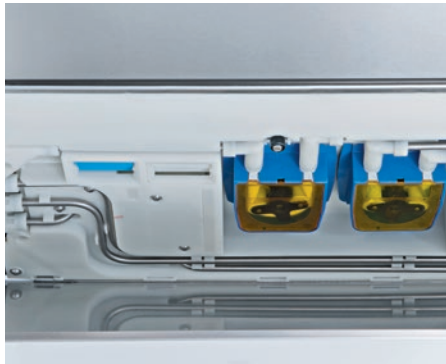

To ensure maximum performance and product life, strong gauge, hygienic stainless steel (not plastic) is used to build the *M-iClean U*. The dosing pipes shown are just one example.



M-iClean U filters are easy to remove and simple to clean. Special sensors continually monitor and report clean status.

M-iClean U with *ComfortAir* technology does what others can't

m
MEIKO
The clean solution

Wash after wash, MEIKO's incredible heat-recovery system performs to perfection. Immediately after cycle end – **GO AHEAD!** The door can be opened without the dreaded "steam cloud". No more fogged-up glasses, added kitchen heat, or moisture on bulkheads and fixtures.



It provides a fresher, more pleasant workplace for your employees, which can translate to a more positive experience for your passengers.



The clean solution


Member of the **MEIKO** GROUP

MEIKO USA, Inc.
1349 Heil Quaker Blvd. · La Vergne, TN 37086, USA
Phone Toll Free (800) 55-MEIKO
Phone +1 615 399-6600 · Fax +1 615 399-6620
www.meiko.us · sales@meiko.us

Manufacturer:
MEIKO Maschinenbau GmbH & Co. KG · Marine Division
Englerstr. 3 · 77652 Offenburg, Germany
Phone +49 781 203-0 · Fax +49 781 203-1121
www.meiko.info · marine@meiko-global.com



Complies with the hygiene requirements of DIN SPEC 10534.



610.100.01.02.21/EN

We reserve the right to make changes as part of product improvements.