

# Model FV 40.2/40.2G

Glass- and dishwasher

## Installation, Operation and Maintenance manual



EN-US

For the types of the series:

M002DWUC10M1-30

M002DWUC10M1-20



**Before using the machine, carefully read the operating instructions, product description and safety instructions!**

# Contents

<b>1</b>	<b>NOTES ON THE OPERATING INSTRUCTIONS .....</b>	<b>5</b>
1.1	Product identification	5
1.2	Delivery contents	5
1.3	Related documents	5
1.4	Illustration	6
1.4.1	<i>Warnings</i>	6
1.4.2	<i>Notices on use</i>	6
1.4.3	<i>Safety symbols in the instructions</i>	7
<b>2</b>	<b>GUARANTEE .....</b>	<b>7</b>
<b>3</b>	<b>SAFETY .....</b>	<b>7</b>
3.1	Intended use	7
3.2	Misuse	8
3.3	Safety information	8
3.4	What to do in the event of an emergency	10
3.5	Safety notices on the machine	10
3.6	Requirements for the personnel	11
3.7	Electromagnetic compatibility	12
<b>4</b>	<b>PRODUCT DESCRIPTION .....</b>	<b>12</b>
4.1	Functional description	12
4.2	Overview illustration	13
4.3	Membrane keypad	14
4.4	Wash programs	15
4.5	Detergent and rinse aid	16
4.5.1	<i>Detergent</i>	17
4.5.2	<i>Rinse aid</i>	17
4.5.3	<i>Checking the correct dosing settings</i>	17
4.5.4	<i>Dosing units</i>	17
4.5.5	<i>Change of products</i>	18
4.6	Additional equipment	18
<b>5</b>	<b>TECHNICAL DATA .....</b>	<b>19</b>
<b>6</b>	<b>TRANSPORT.....</b>	<b>19</b>

<b>7</b>	<b>REQUIREMENTS FOR INSTALLATION.....</b>	<b>20</b>
7.1	Requirements for the installation location	20
7.2	Requirements for the wastewater connection	21
7.3	Requirements for the fresh water connection	21
7.4	Requirements for the electrical connection	22
<b>8</b>	<b>INSTALLATION.....</b>	<b>23</b>
8.1	Removing the rear panel	23
8.2	Electrical installation	24
8.3	Connecting the fresh water pipe	25
8.4	Connecting the wastewater pipe	26
8.5	Connection for wastewater temperature control (optional)	27
8.6	Connecting the dosing system	28
8.7	Connecting the detergent and rinse aid canisters	29
8.8	Terminating the installation	30
<b>9</b>	<b>COMMISSIONING .....</b>	<b>31</b>
9.1	Checking the requirements for commissioning	31
9.2	Performing commissioning	31
9.3	Venting (priming) the pipes	32
<b>10</b>	<b>OPERATION/USE .....</b>	<b>33</b>
10.1	Prior to switching on the machine	33
10.1.1	<i>Starting up the dishwasher</i>	35
10.2	Washing	35
10.2.1	<i>Useful information for loading the washware</i>	35
10.2.2	<i>Selecting the wash program</i>	36
10.2.3	<i>Starting the wash cycle</i>	37
10.2.4	<i>Unloading the washware</i>	38
10.3	Switching off the machine	39
10.4	Replacing the canisters	40
10.5	Malfunctions	41
10.5.1	<i>Messages</i>	42
10.6	Modifying the settings	47
10.7	Level 1	47
10.7.1	<i>Viewing the parameters</i>	48
10.7.2	<i>Venting (priming) the pipes</i>	48

10.8	Level 2	49
<b>11</b>	<b>CLEANING .....</b>	<b>50</b>
11.1	Cleaning the interior	50
11.2	Cleaning the membrane keypad	52
11.3	Cleaning the outer stainless steel surfaces	52
11.4	Cleaning the surrounding area	52
11.5	Descaling	53
<b>12</b>	<b>MAINTENANCE .....</b>	<b>54</b>
12.1	Maintenance work	55
12.2	Maintenance table	56
<b>13</b>	<b>DISMANTLING AND DISPOSAL.....</b>	<b>58</b>
13.1	Disposal of packaging materials	58
13.2	Dismantling and disposal of the old machine	59
<b>14</b>	<b>INDEX .....</b>	<b>60</b>
<b>15</b>	<b>NOTES.....</b>	<b>62</b>

# 1 Notes on the operating instructions

The operating instructions as well as the applicable documents must be read before initial commissioning, kept for later use, and be accessible to the operator at all times. Failure to observe the operating instructions may result in damage to persons and property.

These operating instructions can be downloaded at the following address:  
**www.meiko.us** or <https://partnernet.meiko-global.com>.

## 1.1 Product identification

These operating instructions apply to the following machine types:

- Glass and dishwasher FV 40.2
- Glasswasher FV 40.2 G

FV 40.2 : M002DWUC10M1-30

FV 40.2 G : M002DWUC10M1-20

## 1.2 Delivery contents

- Glass and dishwasher FV 40.2/FV 40.2 G
- Matching racks for glassware and dishes depending on machine model
- Connection hoses for fresh water and wastewater
- Documentation

## 1.3 Related documents

In addition to these operating instructions, there are other documents:

- Short operating instructions
- Wiring diagram (behind the lower front panel)
- Data sheet with technical data and dimensions

## 1.4 Illustration

### 1.4.1 Warnings



**WARNING** – indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.



**CAUTION** – indicates a possible hazardous situation which, if not avoided, could result in minor or moderate injury or damage to property.

### 1.4.2 Notices on use

**NOTE** – indicates a possible hazardous situation which could result in damage to property.








**IMPORTANT** – indicates useful information about the product or its use.

#### Notes on using the document:

- A bullet point (•) indicates a list.
- Numerals (1.) indicate several action steps that must be executed in the specified order.
- Position numbers in the text that refer to position numbers in figures are shown in parentheses:  
(1) Position number 1 in the figure
- The text is always below the figure and refers to it until a new image follows.

### 1.4.3 Safety symbols in the instructions

	Read the operating instructions		Disconnect from the power supply
	Potential equalization connection		Warning of dangerous electric voltage
	Manufacturer		

## 2 Guarantee

FOR WARRANTY ACTIVATION,  
please contact your authorized MEIKO service partner.

For an ASA listing, please refer to either the QR code on the back cover of this manual or visit our website at [www.meiko.us](http://www.meiko.us). You may also contact MEIKO service directly at (800) 868-3840.

You will be asked to schedule your performance and installation inspection. This inspection is provided **FREE OF CHARGE** to ensure that your new dishwasher is properly installed.

**YOUR GUARANTEE IS NOT VALID UNTIL THIS FREE INSPECTION HAS BEEN COMPLETED BY YOUR AUTHORIZED SERVICE AGENCY.**

## 3 Safety

Read and observe all safety information, instructions and symbols attached to the product. Improper use may result in damage to the product or danger to the user.

### 3.1 Intended use

The dishwasher is intended for commercial use only and is designed to wash dishes, cutlery, glasses, kitchen utensils, baking sheets, and containers. The washware must be suitable for commercial dishwashers.

## **3.2 Misuse**

The dishwasher must not be used for:

- Washing kitchen utensils with electrical components
- Cleaning textiles, oven cloths or steel sponges
- Washing utensils made of iron or utensils that must not come into contact with foodstuff (e.g. ashtrays, candlesticks, etc)
- Cleaning living creatures
- Washing food for subsequent consumption
- Preparing foodstuff in the machine
- Taking wash water to prepare food or for drinking
- Washing support grids of electric ranges / grills of gas ranges
- Filling the machine from an external source (e.g. shower)
- Disposing of dirty water using the dishwasher (e.g. from a cleaning bucket)
- Standing or sitting on machine parts (e.g. door)
- Washing dishes made of wood or dishes that have wooden parts
- Washing plastic parts that are not resistant to heat and alkaline solution
- Washing parts made of aluminum (pots, containers, or trays, for example, with a suitable detergent only to avoid black discoloration)
- Conversions and modifications by means of non-approved conversion kits

## **3.3 Safety information**

- Do not open the door while the program is running.
- Only operate the dishwasher when it is in perfect working order. All protection devices and housing parts as well as the tank cover sieve must be installed.
- Place washware, in particular small items, in the appropriate rack inserts.
- The washware must not come into contact with the wash arms/rinse arms of the dishwasher.
- Wear suitable work clothing, protective gloves and sturdy shoes.
- Do not wear rings, necklaces or other pieces of jewelry.
- Connect the suction lances of the dishwasher correctly to the canisters.
- Use optional bought-in parts in accordance with the associated instructions.



**Electrical connection, see page Fehler! Textmarke nicht definiert..**

- The power supply must be fused in accordance with the regulations and a lockable main switch provided in the local electrical installation.
- The electrical safety of this machine is only ensured if it is connected to a properly installed protective conductor system. It is very important to verify this fundamental safety feature. If in doubt, have the building wiring checked by an electrically skilled person.
- Carry out the protective measures as well as the the equipotential bonding connection in accordance with the regulations of the local power supply companies as well as the locally applicable regulations.

### **Fresh water connection**

- Installation components must be suitable and permitted in accordance with local regulations.
- Turn off the shut-off valve of the fresh water supply line before carrying out installation work. Check that all lines are securely connected and tight.
- When replacing an old machine with a new one, make sure that the existing feed hose is exchanged for the new feed hose supplied with the machine.

### **Environment**

- Do not remove safety and warning notices from the dishwasher and ensure they are legible. Replace any damaged safety and warning notices.
- Do not process hazardous substances (hazardous to health, especially toxic, highly flammable and explosive substances) in the machine.
- Do not operate the dishwasher in a potentially explosive atmosphere.

### **Maintenance and repair**

- Observe the maintenance specifications and intervals, including those of optional bought-in parts.
- Only use original spare parts from the manufacturer.
- Before opening the housing parts, ensure the local main switch has been disconnected from power and secured so that it cannot be switched on again.

## Conversions

- Installation of an external dosing system is possible. Other modifications to the machine are not permissible.
- The safety of the dishwasher must not be impaired by the subsequent installation of a dosing system. Only use dosing technology approved by MEIKO.

### 3.4 What to do in the event of an emergency



- In dangerous situations, disconnect the machine from the power supply using the available main switch.

### 3.5 Safety notices on the machine



The safety notice is located on the right side panel and on the rear panel.

### 3.6 Requirements for the personnel

Installation, commissioning, instruction, repairs and maintenance of MEIKO products may only be carried out by authorized service partners.

The operator must check the area around the machine or system for hazards to other persons, e.g. children or persons with reduced physical, sensory or mental capabilities, or with a lack of experience or knowledge.

During operation it must be ensured that:

- Only adequately trained and instructed personnel are allowed to work on the machine.
- Personnel responsibilities for operation, maintenance and repairs must be clearly defined.
- Any personnel undergoing training are only allowed to work on the machine under the supervision of an experienced person.
- No person is under the influence of alcohol, drugs or medication (perceptual disorder).

The required qualifications for performing specific work on the machine are determined by MEIKO:

<b>Persons</b>			
<b>Activity</b>	<b>Trained operating personnel</b>	<b>In-house technician authorized by MEIKO</b>	<b>Service technician authorized by MEIKO</b>
Operation, use	✓	✓	✓
Cleaning	✓	✓	✓
Checking safety devices		✓	✓
Troubleshooting	✓	✓	✓
Troubleshooting, mechanical	✓	✓	✓
Troubleshooting, electrical		✓*	✓
Maintenance		✓	✓
Repairs		✓	✓

\* When trained as an electrically skilled person



### **Note**

The instructions must be acknowledged in writing.

**Qualified personnel**, as defined by these operating instructions, are persons who:

- Are over 14 years of age.
- Due to their training, experience and instruction are able to perform the required activities.
- Are authorized to perform the required activities by the person responsible for safety of the machine.
- Have read and understood the operating instructions and corresponding safety information and will follow them.

## **3.7 Electromagnetic compatibility**



### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **4 Product description**

### **4.1 Functional description**


The dishwasher has one wash cycle and one final rinse cycle.

A temperature controller keeps the set wash temperature at 155°F (66°C), minimum. A rotary pump circulates the water from the wash tank into the wash nozzles. The water jets hit the washware from different directions. This ensures uniform washing results.

The wash cycle is followed by a fresh water final rinse. A separate nozzle system rinses the washware using hot fresh water with at least 180°F (82°C). This heats up the washware for the subsequent drying process.

At the same time, the rinse water is used to regenerate the wash water; this reduces the degree of soiling of the wash water.


## 4.2 Overview illustration

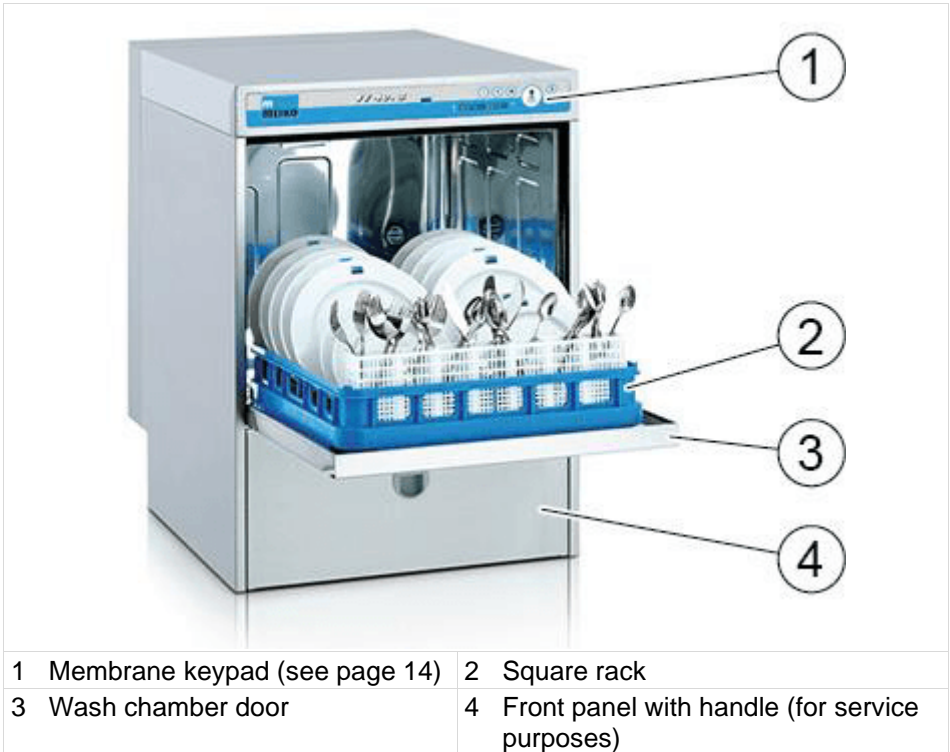

The dosing units for detergent and rinse aid are located behind the front panel (4).

## 4.3 Membrane keypad

The membrane keypad has 5 keys and 4 control lights. The display reports the current temperatures of the wash and rinse water and displays information messages and error codes where applicable. The control lights at the keys indicate readiness for operation, the active wash program, and a running wash cycle.

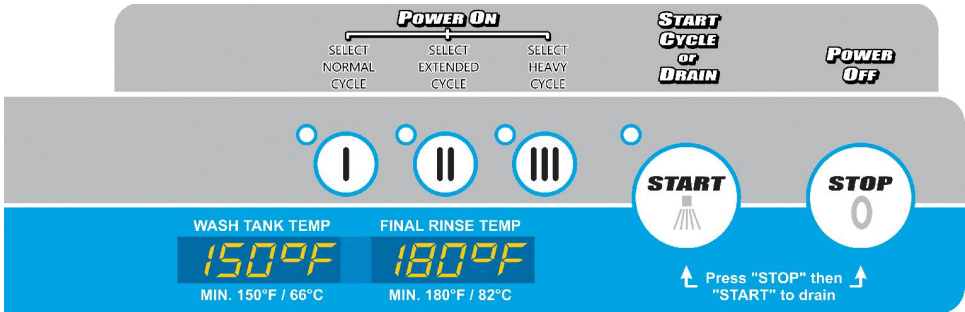

### Key



#### START key with control light

- Starts the program
- Control light on: wash program is running
- Control light flashing: self-cleaning program / drain program is running



#### STOP key

- Program stops
- Switch-off / prepares self-cleaning feature




#### Program keys 1–3 with control lights

- Any key switches the dishwasher on
- Program selection

## Key




- Control light 1, 2 or 3 on: dishwasher ready for operation / wash program 1, 2 or 3 selected
- Control light 1, 2 or 3 flashing: dishwasher is being made ready for operation

## Display

Display	Meaning
	Current wash temperature   Current final rinse temperature

## 4.4 Wash programs

### FV 40.2/FV 40.2 G

Program	Meaning	Washware
	Short	Lightly soiled washware
	Standard	Typically soiled washware
	Intensive	Heavily soiled washware pots, containers, kitchen utensils

## Program assignment

No.	Setpoint for boiler temperature		Setpoint for wash cycle time	
			Washing	Total
	[°F]	[°C]	[s]	[s]
1	185	85	80	95
2	185	85	135	150
3	185	85	195	210

### NOTE

The concentration of the rinse aid in the water remains constant: if the rinse time is changed, the dosing amount of the rinse aid changes correspondingly.

## 4.5 Detergent and rinse aid



### WARNING – Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Do not mix different chemical products.



### CAUTION

- Only use products that are suitable and approved for commercial dishwashers.
- Do not mix different detergents.

By default, the dishwasher is provided with dosing units for dosing liquid detergent/rinse aid. Manual dosing with powder cleaner is not intended.



### 4.5.1 Detergent

Detergents are alkaline (pH value should be >7) and are needed to dissolve soiling from the washware. If necessary, the concentration can be adjusted depending on the water quality, washware and degree of soiling. This setting is made during commissioning by an authorized MEIKO service technician or the chemicals supplier. The typical concentration is 0.256 oz/gallon (2 ml/l).

### 4.5.2 Rinse aid

Rinse aids are acidic (pH value should be between 2 and 7) and accelerate drying of the washware by reducing the surface tension of the water so that it can run off the washware quickly.

Dosing depends on the local water quality and is correct when the water drips evenly from the washware. This setting is made during commissioning by an authorized MEIKO service technician or the chemicals supplier. The typical concentration is 0.0256 oz/gallon (0.2 ml/l).

### 4.5.3 Checking the correct dosing settings

To check if the normal settings are correct for your chemicals, run three empty wash cycles without a rack to completely cycle the water system and obtain accurate test results. This will only take a few minutes. Then, run a sample load with soiled dishes and examine the results.

- If the detergent setting is too low, the dishes will not be adequately cleaned. In some cases, this can be corrected by simply selecting a longer program time (using the cycle selection II (Extended) or cycle selection III (Heavy) keys). However, the detergent concentration may also need to be adjusted.
- Low rinse aid settings may cause spotting and streaking on the dishes.
- If too much of one of the two chemicals is added, the additional chemicals will be wasted. Often, this is difficult to recognize unless you determine the period your chemicals supply will last. In case the chemicals are used up quickly, you might need to adjust the concentration of the chemicals.

**Any adjustments to the factory-set chemical dosing system may ONLY be performed by an authorized MEIKO service partner. Changes by non-authorized personnel will void the guarantee.**

### 4.5.4 Dosing units

The components of the dosing units are subject to high demands and must therefore be regularly maintained and, if necessary, replaced in accordance with the maintenance specification.

The service life of the dosing units and other dishwasher components depends on the use of suitable chemicals.

#### 4.5.5 Change of products



##### **CAUTION**

**When changing the detergent product (even to a product from the same manufacturer), crystallization may occur, which can lead to failure of the dosing system.**

- When changing the detergent product, flush the dosing system using warm water.

##### **Procedure for changing the detergent product:**

1. Provide a suitable container with warm water and insert the suction lance.
2. Thoroughly flush the dosing system several times by **venting (priming) the lines**, see page 32.
3. Wipe the suction lance and put it into the canister with the other detergent product.
4. Refill the dosing system by **venting (priming) the lines**.

## 4.6 Additional equipment

### **Auto Safe**

An internal boiler heating is regulated by the electronic control system to ensure a proper final rinse temperature, regardless of the fresh water temperature.

### **Soft Start**

The wash water is pumped at a reduced pressure for the first few seconds of the wash cycle. This protects the washware from being damaged by a sudden burst of pressure.

### **Pressure booster pump**

A pressure booster pump ensures that the final rinse pressure remains constant.

### **Drain pump**

For wall drains or floor drains.

### **Aqua Stop**

Automatically shuts the machine down if a water leak is detected.

## 5 Technical data

MEIKO has created a data sheet that shows machine dimensions as well as connection and consumption values.

For additional data, please refer to the data sheet.

### Transport weight (including packaging)

Version	Weight, approx.
FV 40.2	218 lbs (98.9 kg)
FV 40.2G	207 lbs (93.9 kg)

### Noise emission

Workplace noise level  $L_{pA} \leq 70$  dB(A).

## 6 Transport



### IMPORTANT

During shipping and installation, the dishwasher must be positioned upright or on its left side. Some water may remain in the lines after pre-shipment testing. If the unit is positioned in any manner **except** upright or on its left side, this water can affect the operation of the water level sensor.

- Check that the delivery is complete immediately upon receipt by comparing it with MEIKO's order confirmation and/or the delivery note.
- If applicable, submit claims for any missing parts immediately to the freight forwarder and notify MEIKO.
- Check the machine for shipping damage.

### NOTE


If you suspect any shipping damage, the shipping company and MEIKO (Customer Service (800) 868-3840) must be informed immediately in writing. Photograph any damaged parts and send the pictures to MEIKO.



### **WARNING – Danger of injury due to machine tipping**

- Only qualified personnel may carry out transport works.
- Please observe the safety information on the packaging.
- Always transport the machine on a wooden frame only.
- Wear protective gloves and safety shoes.

The packaging is specifically designed to allow the machine to be moved safely and securely using a pallet jack or a sack truck. For safe transport, the dishwasher is supported by a special square timber frame.

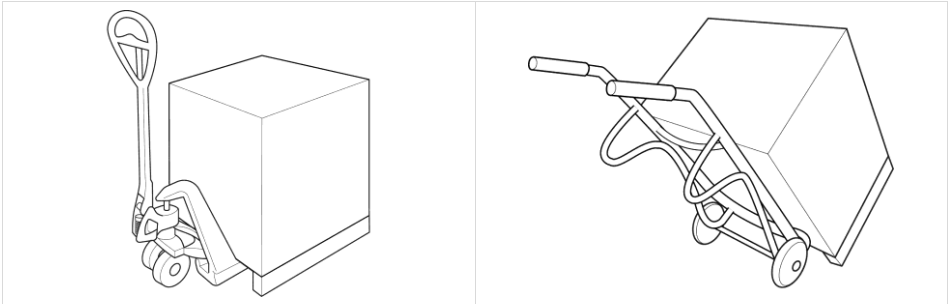

- Transport with care.
- Unpack the dishwasher only once transport is completed.
- Open the packaging using a suitable tool.

## **7 Requirements for installation**

### **7.1 Requirements for the installation location**

- The area **MUST** be frost-free. Freezing temperatures (32°F/0°C or lower) inhibit proper operation and can damage internal components.
- The area **MUST** have a firm floor surface. It is possible to compensate for uneven flooring by adjusting the feet.
- The area should be away from appliances, furniture or surfaces that can be damaged by steam. If this is not possible, these items should be protected from the small quantities of steam that are released during normal operation of the dishwasher.

## 7.2 Requirements for the wastewater connection

A wastewater pipe is integrated into the drain pump.

- Connect the drain hose to the on-site wastewater pipe.
- Observe the minimum height for the drain of 24" (610 mm).
- Minimum diameter of the drain: 1 ½" (38 mm).
- Depending on the dishwasher's field of application, a grease trap may be included, based on the general/location-specific regulations.
- Drain Water temperature can be in excess of 150 °F (65 °C). If a local plumbing code requires a lower drain temperature, please refer to optional Drain Water Tempering kit.

## 7.3 Requirements for the fresh water connection

**Fresh water connections and their components must be made in accordance with local regulations. From a biological perspective, the fresh water must be of drinking water quality. This also applies to treated water.**

Installation components and materials must be suitable and permitted in accordance with local regulations. A solenoid valve is integrated into the dishwasher's fresh water pipe. This, together with the leakage detector in the base drip tray in the subframe, ensures that the fresh water supply is shut off in the event of a leak in the machine.

### **Recommended water hardness:**

- 1–3 grains per U.S. gallon (gpg) (6 gpg, maximum)

### **Recommended water temperature:**

- 140°F (60°C)  
Colder water will result in a longer preheat time during startup and will extend the wash cycle time. The required temperatures will still be reached.

### **Pressure range of the fresh water supply flow pressure upstream of the solenoid valve:**

- 8.7–72.5 psi (0.6–5 bar)

### **Measures to ensure correct water pressure:**

- If the minimum flow pressure is too low, increase the pressure using a pressure booster pump (not supplied as standard).
- If the maximum pressure is exceeded, limit the pressure using a pressure regulator (not supplied as standard).

### **Other measures:**

- Make sure that no foreign iron particles can enter the machine via the fresh water connection. The same also applies to contamination by other metal particles (e.g. copper shavings).
- A dirt trap must be fitted in the fresh water supply to protect the solenoid valve. An additional dirt trap is not required.
- The feed hose must be sufficiently long so that the machine can be moved for servicing purposes.

## **7.4 Requirements for the electrical connection**



### **IMPORTANT**

The wiring diagram is under the upper cover of the dishwasher. It must remain in the dishwasher. The rating plate with the electrical connected values is on the inside of the front panel and on the outside on the right side panel.

### **Requirements for the operating company:**

- The correct voltage and current type must be available.
- Safeguard the power supply in accordance with the regulations and provide it with an all-pole main switch in the permanently installed electrical installation.
- Connect the dishwasher to an equipotential bonding system.
- Do not connect any additional consumers to the fuse protecting the dishwasher.
- Electricity supply without a neutral conductor (N): When connecting to three-phase current, use a 4-pole terminal strip (L1, L2, L3, PE) or a 3-pole terminal strip (L1, L2, PE).

The products are intended for permanent connection to the locally available power supply and have been tested for the market accordingly. Any other type of electrical connection must be made by specially trained personnel.

Install the dishwasher in accordance with local regulations. In the absence of any such regulations, install the machine in accordance with the applicable requirements in the National Electrical Code, NFPA 70, Canadian Electrical Code (CEC), Part 1, CSA C22.1 and the Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations, NFPA 96.

## 8 Installation



### IMPORTANT

During shipping and installation, the dishwasher must be positioned upright or on its left side. Some water may remain in the lines after pre-shipping testing. If the unit is positioned in any manner **except** upright or on its left side, this water can affect the operation of the water level sensor.




### IMPORTANT

Installation may be performed only by an authorized service technician.


### 8.1 Removing the rear panel

In order to attach the supply connections, the rear panel of the dishwasher must be removed.

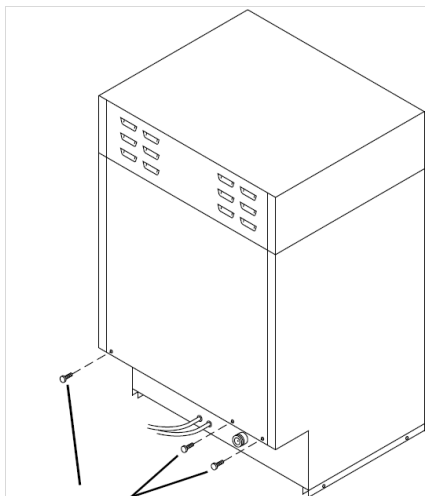

1. Remove and retain the three screws on the bottom of the rear panel.

After installation, attach the rear panel again and tighten using the three screws.

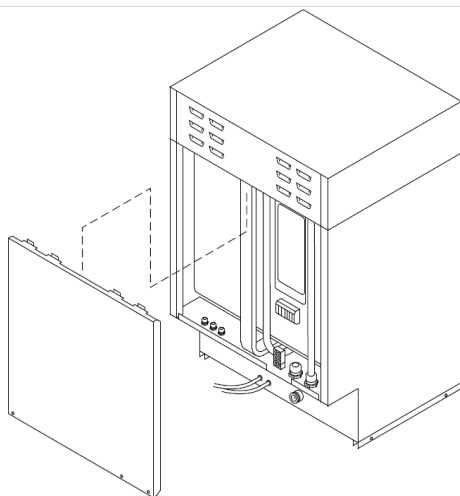

2. Carefully slide the rear panel down to free the retaining clips along the casing.
3. Remove the rear panel to the back.

## 8.2 Electrical installation




### WARNING – Danger to life from electric shock



- Work on the electrical system must only be conducted by qualified personnel who comply with the electrotechnical rules.
- Disconnect the machine from the power supply before removing any casing parts or working on the electrical system. To do this, turn the local main switch to **OFF** and ensure that it cannot be switched back on again.
- Attach all housing parts again before switching on the voltage again.



1. To do this, turn the local main switch to OFF and ensure that it cannot be switched back on again.

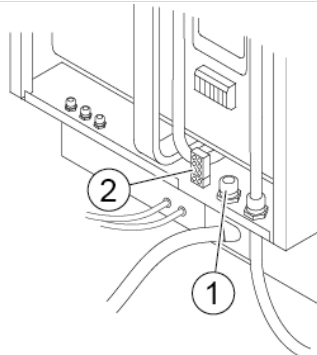


2. Route the electrical supply line through the strain relief (1) from below and to the main connection terminal block (2).
3. Fasten the supply line using the strain relief (1). You should leave enough slack in the supply line to prevent stress on the connections.

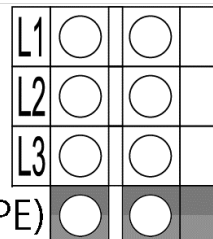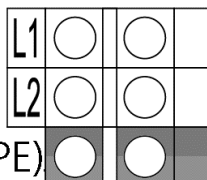

4. Connect the supply line in accordance with the figure and the wiring diagram.



## Protective equipotential bonding

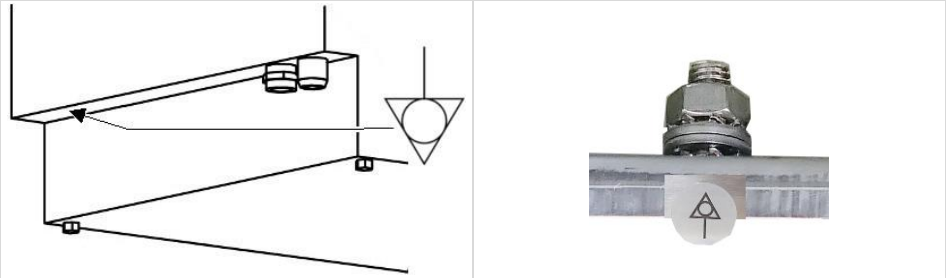

The screw for equipotential bonding is located on the back of the machine near the media connections.

## 8.3 Connecting the fresh water pipe

### NOTE

#### Damage to property due to deposits


Deposits in the fresh water supply (tube sealant, metal particles, soldering agent etc.) can result in damage to the dishwasher.

- Prior to connection, thoroughly flush the fresh water pipe using fresh water.




### IMPORTANT

The fresh water pipe must be sufficiently long so that the dishwasher can be moved for servicing purposes.

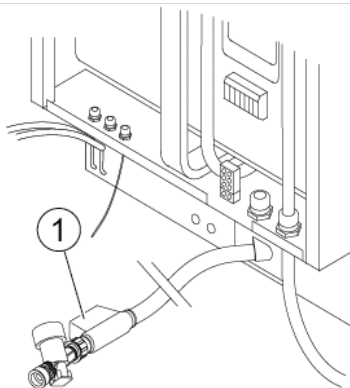


- Connect the fresh water connection (1) of the dishwasher to the fresh water supply.

## 8.4 Connecting the wastewater pipe

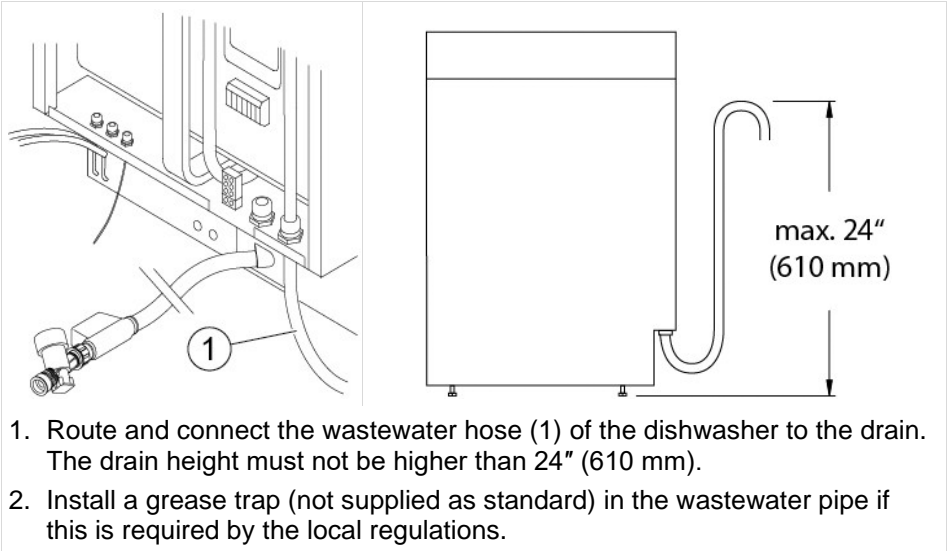

## 8.5 Connection for wastewater temperature control (optional)


The wastewater can have a temperature of more than 150 °F (65 °C). Install a temperature conditioning kit if a lower wastewater temperature is required by local regulations.

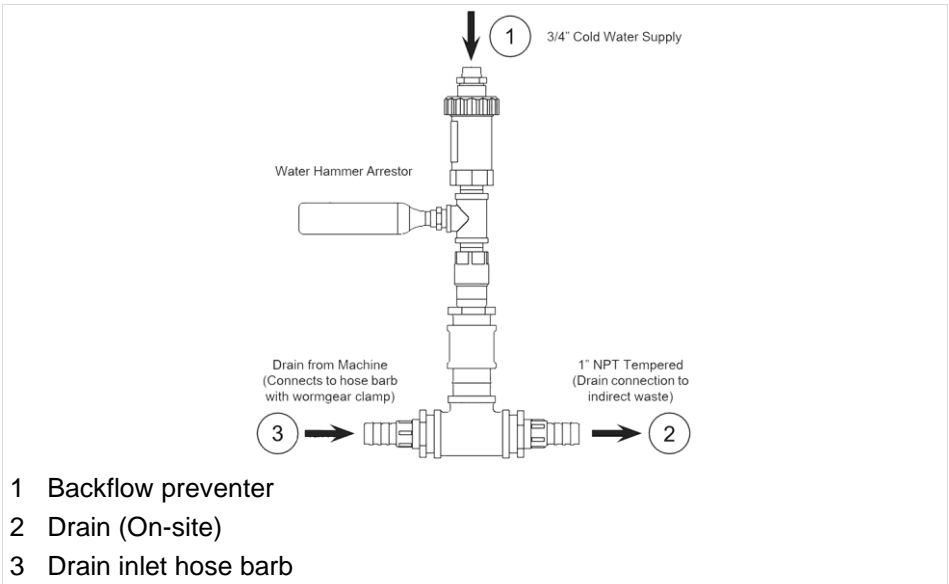

### Connection procedure:

1. Position tempering assembly, as required, behind the machine..
2. Connect **cold water supply line** to the backflow preventer (1), using a 1/2" pipe fitting. If you are soldering, be sure to remove the union on the backflow preventer. This will insure that the plastic internal parts do not melt.
3. Connect from drain (2) of the tempering assembly to an indirect waste drain pipe. If required, the 1" barb can be removed and the drain can be connected using 1" fittings and pipe.
4. Connect drain hose from the machine to the drain inlet hose barb (3) and secure with wormgear clamp.
5. Turn on **cold water** and check for leaks.
6. Fill machine and operate. The drain water exiting the drain water tempering assembly (2) should be no higher than 140 °F (60 °C).


## 8.6 Connecting the dosing system

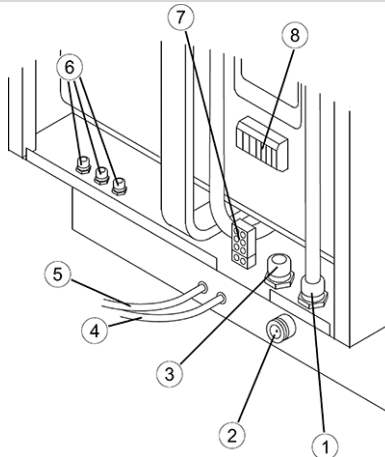

1 Drain connection	2 Fresh water connection
3 Strain relief for electrical supply	4 Detergent pipe (transparent)
5 Rinse pipe (blue)	6 Strain relief for the supply from external dosing units
7 Terminal block for electrical supply	8 Terminal block for external dosing units

The FV 40.2 is designed for use with liquid detergent and liquid rinse aid. The hoses at the lower rear are prepared for the supply of detergent (4) and rinse aid (5).

Optionally, the machine can be fitted with internal dosing units for detergent and rinse aid. In this case, the canisters are directly connected to the supply hoses. If machines are not provided with the optional internal dosing units, the hoses must be connected to external dosing units. Contact MEIKO in this case.

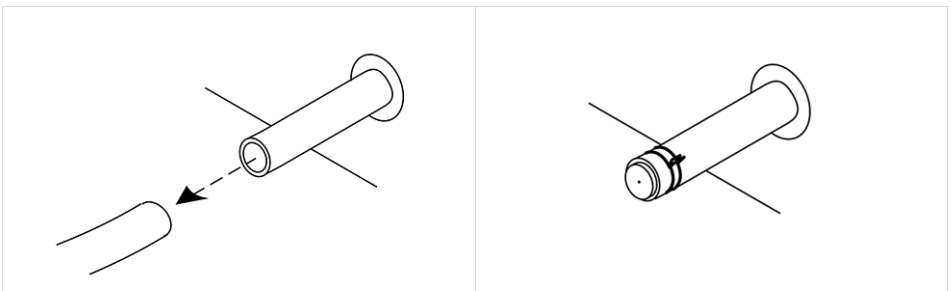

## CAUTION

If one or both dosing pipes are not used cut the relevant dosing pipe(s) near the point where it comes out of the machine and close using the supplied plug and the wire clip.

For machines that are provided with the optional internal dosing units, see page 29.


## 8.7 Connecting the detergent and rinse aid canisters




### WARNING – Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Do not mix different chemical products.

The delivery includes two suction hoses and accessories for the connection of the detergent and rinse aid canisters.

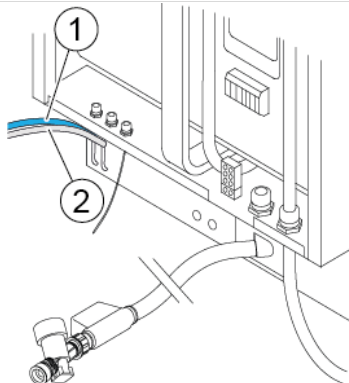

1. Have the hose for the rinse aid (1, blue) and for the detergent (2, transparent) ready.
2. Have the two canisters available.
3. Screw off the cover of the canisters.

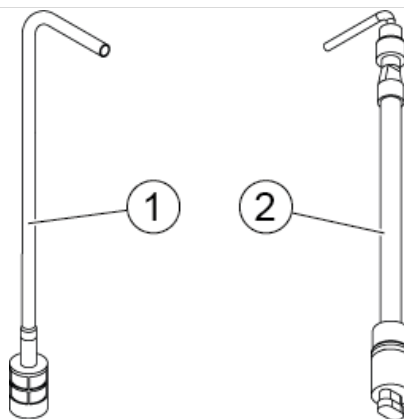

1. Insert the rinse aid suction lance (1) and the detergent suction lance (2) in the corresponding canister.
2. Slide the rinse aid hose (blue) and the detergent hose (transparent) onto the associated suction lance hoses. The suction lances must be inserted so that they are completely at the bottom.
3. Clamp the two hoses using a collar clamp.

## 8.8 Terminating the installation



- Ensure the machine is level in both directions by using a spirit level.
- Compensate for an uneven floor by adjusting the feet.
- Table joints must be sealed with a detergent-resistant sealant (e.g. silicone).
- Check that the machine is stable.

**For disposal of packaging materials, see page 58.**

## 9 Commissioning



### **WARNING – Danger of injury when entering a danger zone**

- Only qualified personnel may work on the machine.
- Remove unauthorized persons from the danger zone.
- Block off the danger zone and mark it for third parties.
- Always wear cut-resistant protective gloves when removing casing parts or working inside the machine.

### 9.1 Checking the requirements for commissioning

#### **NOTE**

#### **Damage to property due to steam emission**

Small quantities of steam may escape from the dishwasher. It is possible that adjacent furniture swells.

- Protect adjacent furniture from swelling.
- If possible, avoid installing the machine in an area close to furniture susceptible to swelling.

Requirements to be provided by the customer:

- Consistently frost-free storage and installation area.
- Anti-slip floor coverings provided in the work area around the machine.
- All connections are made correctly as described above.

### 9.2 Performing commissioning

To avoid damage or injuries during machine commissioning, please note the following points:

- Check supplier parts (e.g. external water handling devices). More detailed information can be found in the relevant operating instructions.
- Ensure that all tools and foreign parts are removed from the machine.
- Check if all casing parts are mounted on the machine.

- Turn on the main switch.
- Vent the pipes for the chemicals and check for correct dosing.















### 9.3 Venting (priming) the pipes

Venting of the detergent or rinse pipes must be performed during commissioning to fill the pipes with detergent and rinse aid.

The pipes must also be vented if the dosing units have sucked in air. This occurs if a canister is completely emptied during operation, or if one of the suction lances was not inserted all the way to the bottom of the canister.

For machines with external dosing systems, the detergent and rinse pipes must be vented in accordance with the manufacturer instructions.

For machines with built-in dosing systems, vent the pipes as follows:

 	1. Press the STOP key for approx. 5 seconds until CodE 1- - - - is displayed.
 	2. Press the START key 5 times until 1-1 - - - - is displayed.
 	3. Press the program key I. 1-2 - - - - is displayed.
 	4. Press the START key. Priming of the rinse pipe will start. The time remaining is displayed. By default, priming takes 180 seconds.
 	5. If the time has expired and 1-2 - - - - is displayed, press program key I. 1-3 - - - - is displayed.
 	6. Press the START key. Priming of the detergent pipe will start. The time remaining is displayed. By default, priming takes 30 seconds.
 	7. If the time has expired and 1-3 - - - - is displayed, press the STOP key to switch the machine off.



## 10 Operation/use

### 10.1 Prior to switching on the machine




#### **WARNING – Risk of injury from contact with chemicals**

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Do not mix different chemical products.


The dishwasher may only be used if the operating instructions have been read and understood. Incorrect operation may result in personal injury or damage to property.



1. Ensure the water supply is available.

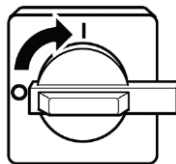


2. Turn on the main switch.

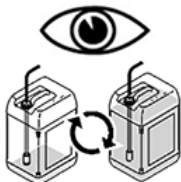


3. Check the detergent and rinse aid and replace in accordance with the manufacturer instructions, if necessary.

## NOTE


If there is air in the hoses, the dosing function will not work properly. The hoses must be vented, see page 48.

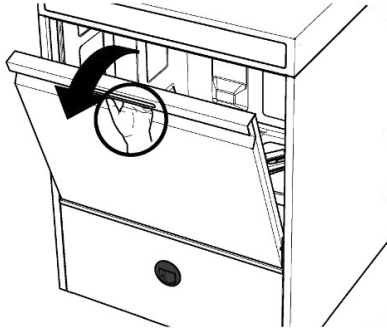

4. Open the door.

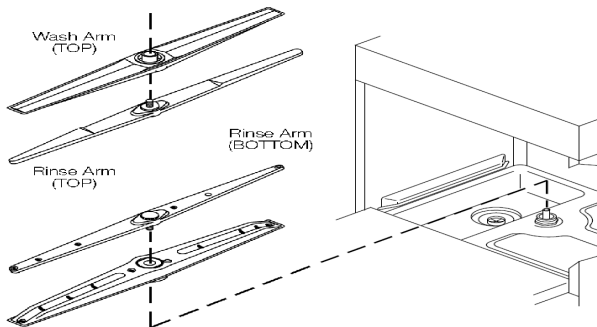

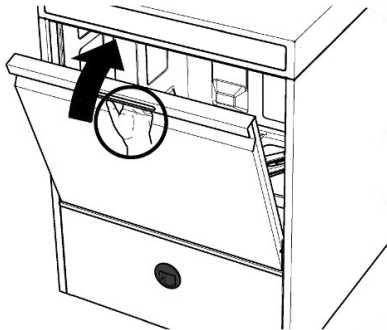


5. Insert the filter, the tank cover sieve and the wash systems.



6. Close the door.

10.1.1 Starting up the dishwasher



The time required for the machine to be ready to operate depends on the temperature of the supplied water and the capacity of the installed boiler or tank heating.



 <p>The dishwasher is closed and does not have a rack inside.</p> <p>1. Press <b>wash program keys 1, 2 or 3</b>.</p>	 <p>The dishwasher will be filled and heated up. During this time, the control light above the selected program key flashes.</p>
 <p>When the machine is ready to operate, the control light above the selected program key is permanently on.</p>	

10.2 Washing



10.2.1 Useful information for loading the washware

When loading the racks with items of crockery and cutlery, observe the following points for optimum washing results:


	<ul style="list-style-type: none"><li>• Hollow containers must always be loaded upside down in the rack. Otherwise, the water will not be drained from the washware and brilliant drying will not be possible.</li><li>• Keep a space between the hollow containers so that they do not rub against each other. This prevents scratches.</li><li>• Select a rack with appropriate compartment dividers so that the glasses will remain a correct position.</li></ul>
	<ul style="list-style-type: none"><li>• Place plates, trays and compartment food trays into the racks at an angle. The inner surfaces face upwards.</li></ul>

	<ul style="list-style-type: none"> <li>• Do not place crockery items on top of each other in the rack so that the wash fluid can reach all surfaces easily and a short program duration is sufficient.</li> <li>• It is more efficient to load the rack with fewer items and run shorter wash cycles.</li> </ul>
	<ul style="list-style-type: none"> <li>• If cutlery quivers are used, always insert the cutlery pieces into the cutlery quiver with the handles down.</li> <li>• Place spoons, knives and forks in cutlery quivers as far as possible, as cutlery of the same type can lie close together.</li> <li>• Do not crowd the cutlery in the individual cutlery quivers.</li> </ul>


### 10.2.2 Selecting the wash program

 <ul style="list-style-type: none"> <li>• Press the required program key.</li> </ul>	 <p>The control light of the selected program key is on.</p>
---	---


### 10.2.3 Starting the wash cycle

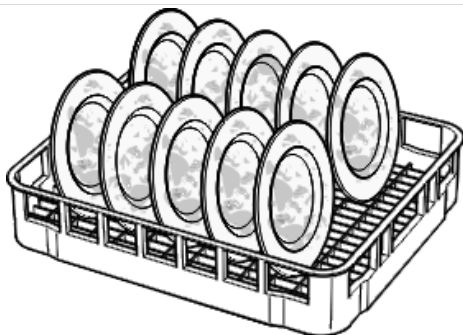


1. Pre-wash the washware (remove any gross food waste, napkins, tooth picks, lemon peel etc.).
2. Put the washware into the rack.

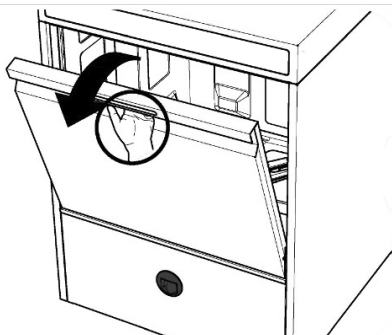

3. Open the door.

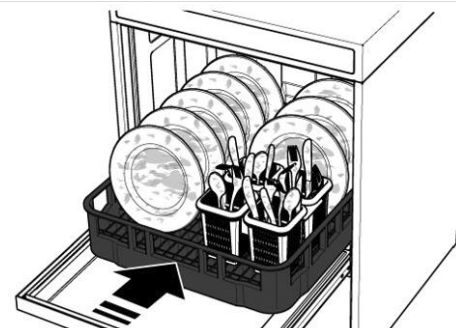


4. Insert the rack into the dishwasher.

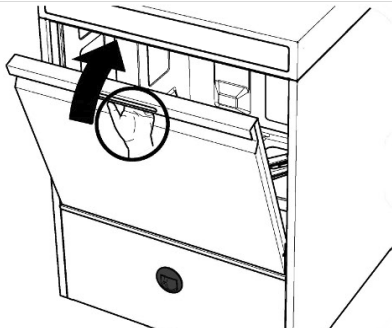

5. Close the door.



6. Change the program, if required, see page 36.



7. Press the **START** key.  
The control light is on as long as the program is active.


If the selected program is not long enough to heat up the boiler and tank water to the minimum temperature, the program duration must be extended. The program runs until the minimum temperatures are reached, but for a maximum of 5 minutes.

## 10.2.4 Unloading the washware




**CAUTION – Danger of burns from hot wash water, hot washware and hot machine parts**


- Wear protective gloves, if necessary.
- Let the washware cool down before emptying, if necessary.
- Let the machine cool down before touching machine parts, if necessary.
- Never open the door during a wash cycle.
- Only open and close the door using the designated handle(s).

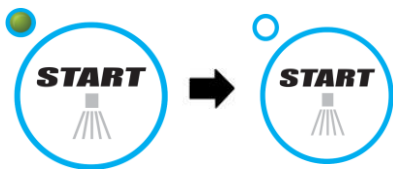


At the end of the program, the control light turns off and an acoustic signal sounds.

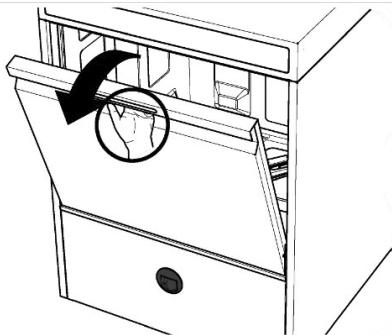

1. Open the door.

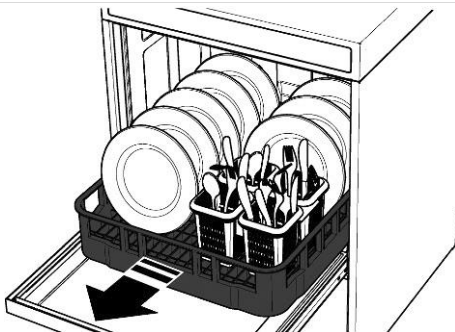

2. Carefully remove the rack.

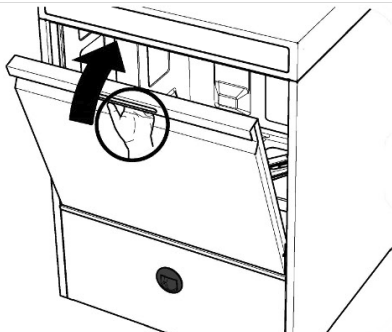

3. Close the door.

## 10.3 Switching off the machine



### WARNING – Danger of scalding

- Do not open the door during self-cleaning.

The dishwasher is closed and does not have a rack inside.



1. Press the **STOP** button.  
All control lights turn off.



2. Press the START key.



The self-cleaning program starts. The control light near the START key flashes. The wash water is pumped out and the wash chamber is sprayed with hot fresh water.



At the end of the program, the control light turns off. Now, the machine can be cleaned, see page 50.

## 10.4 Replacing the canisters



### **WARNING – Risk of injury from contact with chemicals**

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Do not mix different chemical products.



Rinse aid empty



Detergent empty




### **IMPORTANT**

The canisters for detergent and rinse aid are located in close proximity to the dishwasher.



### **IMPORTANT**

When using a suction lance that detects whether a canister is empty, shortage of detergent or rinse aid will be indicated on the display.

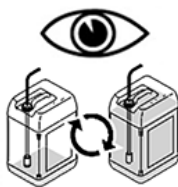

1. Remove the suction lance from the empty canister and insert it into a full canister.
2. If air has been sucked in: vent the pipes, see page 32.



## 10.5 Malfunctions

Many malfunctions can be rectified without the help of the customer service. The following malfunctions can be remedied by the operating personnel or the in-house technician.

### Common malfunctions

Malfunction	Possible cause	Remedy
Dishwasher not filling up	No water available	Open shut-off valve
	Dirt trap clogged	Clean dirt trap
	Door open	Close door
Final rinse not spraying	No water available	Open shut-off valve
	Dirt trap clogged	Clean dirt trap
Streaks/smears on washware	Inappropriate rinse aid	Change product
	Incorrect dosing quantity	Adjust dosing quantity
	Water pre-treatment defective	Check water pre-treatment
Bubbles and streaks on washware	Overdosing	Have the dosing quantity adjusted
Water drops on washware	Underdosing	
Strong foam formation in wash tank	Dirt level too high	Pre-wash washware more thoroughly/change tank water more frequently
	Hand dishwashing detergent used	Do not use a foaming hand dishwashing detergent for pre-cleaning or for cleaning the machine. Foam can cause malfunctions in the dishwasher and poor washing results.
	Inappropriate detergent	Change product
	Inappropriate rinse aid	

Please contact your authorized MEIKO customer service if the listed measures cannot solve the problem.

For a list of authorized customer service points, please either scan the QR code on the back cover of these operating instructions, visit our website at [www.meiko.us](http://www.meiko.us) or give us a call at (800) 868-3840.

### 10.5.1 Messages



When a malfunction occurs, an information or error message (**INFO/ERR**) is displayed.

- Information messages (**INFO**) can be acknowledged using the START key. If the cause has been remedied (see table), operation can be continued.
- Error messages (**ERR**) usually require the deployment of an authorized service technician.
- If the machine displays an information or error message not listed in the following tables, contact your service technician.

INFO	Description	Possible cause	Measures/remedy
120	Emergency program active	No boiler/tank heating No fresh water supply	Further operation possible with restrictions Call service technician
121	Door not closed	Door open I/O circuit board defective Microswitch defective Microswitch not set correctly	Close door Call service technician
122	Incorrect password/no authorization	Code entered incorrectly	Enter code again
123	Factory settings of parameter list	Switching supply voltage on/off	No intervention by operator necessary Message disappears after 5 min.

INFO	Description	Possible cause	Measures/remedy
126	Maintenance required	Set operating hours (P 122) or batch number (P 123) has been reached	Further operation possible Call service technician
325	Drain pump active after triggering of safety level	Wash tank overfilled	Wait until machine is drained
420	Lack of rinse aid (with fill-level detection integrated)	Canister empty Suction lance not inserted correctly	Replace empty canister Check suction lance Vent pipes, if necessary
520	Lack of detergent (with fill-level detection integrated)		

ERR	Description	Possible cause	Measures/remedy
001	EEPROM error	EEPROM not available/defective, incorrectly plugged in, incorrect data, empty	Further operation not possible Call service technician
111	Leakage in base drip tray	Leak in feed hose Drain hose not connected correctly to drain	Replace feed hose, if necessary Check drain hose
118	Signal of the two door contact switches not the same	Malfunction/defect of door contact switch	
201	Boiler level not reached during first filling (with pressure booster pump integrated)	Fresh water supply not sufficient (water supply valve closed) Feed hose	Check water supply Check feed hose Check pre-filter/strainer and clean, if necessary Call service technician, if necessary
202	Boiler level not reached on time during filling (with pressure booster pump integrated)	kinked/loose/leaking Incoming water strainer dirty Solenoid valve defective Boiler switch defective	

ERR	Description	Possible cause	Measures/remedy
203	No changed detected at boiler level switch when emptying (with pressure booster pump integrated)	Pressure booster pump defective Connections (e.g. pressure booster pump) loose Starting capacitor defective	Further operation not possible Call service technician
204	No change yet detected at boiler level switch (with pressure booster pump integrated) after rinse time expired	Boiler level switch defective No signal for pressure booster pump on - from I/O circuit board No signal for boiler full - from I/O circuit board	
205	Boiler temperature not reached after max. heating time (P310)	Boiler heating defective/welding beads on heater Temperature sensor defective, incorrect mounting position Boiler contactor defective, circuit breaker triggered No signal from I/O circuit board	Further operation not possible Call service technician
206	Wash time increase	Boiler not ready on time for final rinse (temperature or level not reached) Boiler heating defective (welding beads) Temperature sensor defective Boiler contactor defective, circuit breaker triggered No signal from I/O circuit board	Acknowledge message, further operation possible Allow the program to end without operator intervention Call service technician if this occurs more often
210	Short-circuit of boiler temperature sensor	Sensor defective Sensor position not correct	Further operation not possible Call service technician
211	Interruption of boiler temperature sensor	Plug contact not connected properly	
212	“Actual” boiler temperature too high (>95°C)	Contactor contact sticking Incorrect sensor/defective sensor	

ERR	Description	Possible cause	Measures/remedy
301	Number of circulatory pumping cycles for tank filling exceeded Tank level analysis disrupted	Supply water pressure too low Incoming water strainer dirty Rinse nozzles dirty Air gap dirty Condensate in level pipe Feed hose kinked/loose/leaking	Check water supply Check feed hose Clean incoming water strainer Clean rinse nozzles Call service technician, if necessary
302	While draining during the wash program, the level does not fall below tank level 1 on time (with drain pump integrated)	Capacity of drain pump too low Drain pump dirty/defective Impeller loose Connections of drain pump loose	Further operation not possible Call service technician
303	While draining during the wash program, the level does not fall below tank level 3 on time (with drain pump integrated)	Starting capacitor defective, tank level analysis disrupted Aquastop does not close correctly No signal from I/O circuit board	
304	Tank temperature not reached after max. heating duration (P314)	Tank heating defective/welding beads on heater Temperature sensor defective, incorrect mounting position Tank contactor defective, circuit breaker triggered	Further operation not possible Call service technician
305	Number of boiler fills insufficient for rinsing. Tank level 2 not reached	Supply water pressure too low Incoming water strainer dirty Rinse nozzles dirty Air gap dirty Condensate in level pipe Feed hose kinked/loose/leaking Level sensor defective Plug contact not connected properly	Check water supply Check feed hose Clean incoming water strainer Clean rinse nozzles Call service technician, if necessary





ERR	Description	Possible cause	Measures/remedy
306	Max. tank level exceeded. Tank level analysis disrupted	Air gap dirty Condensate in level pipe Level sensor defective Plug contact not connected properly	Drain dishwasher and refill Call service technician
307	Tank level sensor defective	Connector loose Sensor or I/O circuit board defective	Call service technician
310	Short-circuit of temperature sensor	Sensor defective Sensor position not correct	Further operation not possible Call service technician
311	Interruption of temperature sensor	Plug contact not connected properly	
312	Actual tank temperature too high (>85°C)	Contactor contact sticking Incorrect sensor/defective sensor	



Please contact your authorized MEIKO customer service if:

- There is an issue with the dishwasher, but no error code is displayed, OR
- An error code is displayed that is not listed here, OR
- The listed measures cannot solve the problem.




For a list of authorized customer service points, please either scan the QR code on the back cover of these operating instructions, visit our website at [www.meiko.us](http://www.meiko.us) or give us a call at (800) 868-3840.

# 10.6 Modifying the settings


Key	Meaning	Key	Meaning
	<b>STOP key</b> <ul style="list-style-type: none"> <li>Starts programming</li> </ul>		<b>START key</b> <ul style="list-style-type: none"> <li>Confirms entry and jumps to next position in the code</li> </ul>
	<b>Program key 1</b> <ul style="list-style-type: none"> <li>Increases value by one</li> </ul>		<b>Program key 2</b> <ul style="list-style-type: none"> <li>Decreases value by one</li> </ul>


- Press the **STOP** key for approx. 5 seconds until **CodE 1- - - -** is displayed.
- Enter the code for the required level. For level 1, it is sufficient to press the **START** key 5 times.

**Level 1: Advanced settings (code 11111)**  
**Level 2: Dosing settings (code 40044)**






After entering the correct code, the desired level (1, 4) is displayed in the left field at the first digital position.









If the entry is incorrect, the **Info 122** message appears.













# 10.7 Level 1

Code display	Meaning
	View parameter, see page 48.
	Vent (prime) rinse pipe, see page 32.
	Vent (prime) detergent pipe, see page 32.



### 10.7.1 Viewing the parameters

 <p>1. Switch to <b>level 1 (11111)</b>, see page 47.</p>	 <p>2. Select entry 1–1.</p>
 <p>3. Confirm the selection.</p>	 <p>The first parameter is displayed.</p>
 <p>4. Scroll through and view the parameters using the wash program keys.</p>	 <p>Level 1 can be exited with the <b>on/off key</b>.</p>

### 10.7.2 Venting (priming) the pipes

 	<p>1. Press the STOP key for approx. 5 seconds until <b>CodE 1-----</b> is displayed.</p>
 	<p>2. Press the START key 5 times until <b>1-1 -----</b> is displayed.</p>
 	<p>3. Press the program key I. <b>1-2 -----</b> is displayed.</p>
 	<p>4. Press the START key. Priming of the rinse pipe will start. The time remaining is displayed. By default, priming takes <b>180 seconds</b>.</p>
 	<p>5. If the time has expired and <b>1-2 ---</b> is displayed, press program key I. <b>1-3 -----</b> is displayed.</p>
 	<p>6. Press the START key. Priming of the detergent pipe will start. The</p>



	time remaining is displayed. By default, priming takes 30 seconds.
 	7. If the time has expired and 1-3 - - - is displayed, press the STOP key to switch the machine off.

## 10.8 Level 2

Switch to level 2 (40044), see page 47.

The parameters relevant for the dosing technology are displayed and can be changed.

Para.	Definition	Adjustment range / Setting
<b>P104</b>	Dosing quantity for rinse aid	0.10–1.00 ml/l (0.20 is the default setting)
<b>P105</b>	Dosing quantity for detergent	0.10–20.0 ml/l (2.00 is the default setting)
<b>P218</b>	Lack of rinse aid indication	1/0 = Display on/off ( <b>Note: must be set to 0</b> )
<b>P219</b>	Lack of detergent indication	1/0 = Display on/off (1 is the default setting)
<b>P224</b>	Activation mode for rinse aid dosing unit	0 = Do not activate ( <b>Should only be selected if not using rinse aid!</b> ) 1 = Activate through calculated runtime (default setting) <b>Note: settings 2 or 3 must NEVER be used on this model!</b>
<b>P225</b>	Activation mode for detergent dosing unit	0 = Do not activate 1 = Activate through calculated runtime 3 = Activate like wash pump ( <b>only used if utilizing an external dispensing system</b> ) <b>Note: Setting 2 must NEVER be used on this model!</b>
<b>P321</b>	Capacity of rinse aid dosing unit	0.10–10 l/h - <b>Must be set to 1.3 l/h</b>
<b>P322</b>	Capacity of detergent dosing unit	0.10–20 l/h - <b>Must be set to 7.0 l/h</b>
<b>P326</b>	Vent (priming) time for rinse pipe	0–255 s (180 s is the default setting)
<b>P327</b>	Vent time (priming) for detergent pipe	0–100 s (30 s is the default setting)

# 11 Cleaning

## 11.1 Cleaning the interior

### **CAUTION - Danger of burns from hot machine parts**

- Allow the machine to cool down before cleaning.
- Wear protective gloves, if necessary.
- Only use the handles provided for opening or closing.


### **CAUTION – Property damage to electrics due to water ingress**

- Never wash the machine, control cabinets and other electrical components using a water hose or high-pressure cleaner.
- Make sure that no water can enter the machine unintentionally.
- If installed at ground level, never flood the surrounding room.



### **IMPORTANT**



Do not use a foaming hand dishwashing detergent for pre-cleaning the dishes. Do not use detergents or stainless steel cleaning agents on the interior of the machine. Foam causes malfunctions and poor washing results.

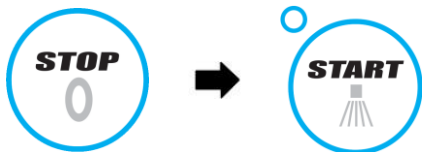


1. Switch off and drain the machine, see page 39.



2. Open the door.

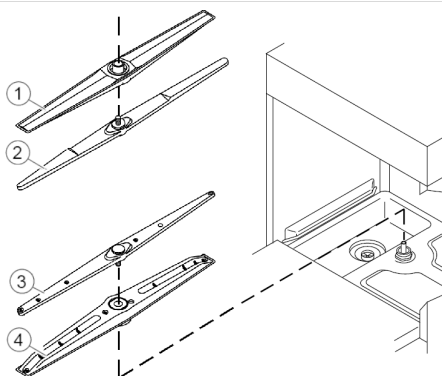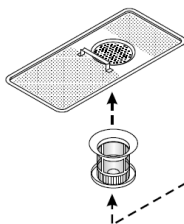

3. Remove the tank cover sieve and the filter. All parts to be cleaned are blue or have a blue handle.
4. Remove all food residues sticking to the tank, the tank heater and the sieves using a brush.
5. Take the wash arms at the top (1)/bottom (4) and the rinse arms at the top (2)/bottom(3) out once a week. Observe the TOP and BOTTOM rinse arm marking.

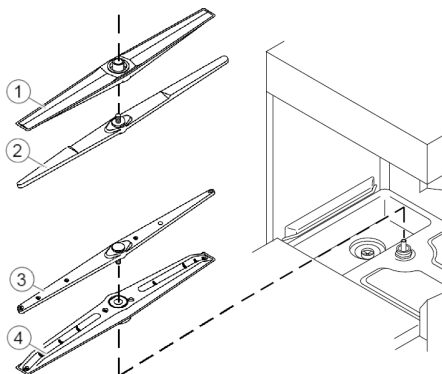

5. Rinse the filters, sieves and the wash and rinse arms thoroughly under running water. When doing this, pay particular attention to the nozzles.
6. Reinstall all parts in reverse order. MEIKO recommends leaving the door open slightly overnight.

## 11.2 Cleaning the membrane keypad

Clean the membrane keypad using a damp cloth.

**IMPORTANT** - Make sure that the membrane keypad does not contact any stainless steel cleaning agents as this may result in damage to the membrane keypad.

## 11.3 Cleaning the outer stainless steel surfaces



### **CAUTION – Property damage to stainless steel due to incorrect cleaning**

Cleaning of stainless steel parts using inappropriate detergents, care products and cleaning utensils leads to damage, deposits or discoloration on the machine.

- Never use aggressive detergents or abrasives.
- Never use detergents that contain hydrochloric acid or chlorine-based bleachers.
- Do not use cleaning utensils previously used to clean non-stainless steel.

Clean the outside of the dishwasher, especially the door handle, once a day. Clean stainless steel surfaces with cleaning agents suitable for stainless steel only.

## 11.4 Cleaning the surrounding area

- Do not use aggressive detergents (e.g. aggressive tile cleaners).
- Make sure that no water can enter the machine unintentionally.
- Do not flood the surrounding area.

## 11.5 Descaling



### **WARNING – Danger of injury from contact with acids**

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Remove descaler residues from all parts of the machine without delay to avoid damage.

Operating the dishwasher using hard water causes lime scale deposits to occur on the boiler interior and tank interior. Descale the inside of the tank, if necessary.

The boiler can be descaled by a service technician only.

Operating the dishwasher using hard water can cause lime scale deposits to occur in the boiler interior and tank interior. If this occurs, it is necessary to descale the tank interior, the boiler casing, the tank heating, the boiler heating and the wash and rinse systems.

#### Notes on descaling:

- For descaling, only use products suitable for commercial dishwashers. Follow the manufacturer instructions.
- Completely flush the descaling agent out of the dishwasher. To do so, perform 3–6 wash cycles without a rack. Any remaining descaling agent residues must be removed using a soft cloth and hot water. Then, perform a final wash cycle.
- Drain the dishwasher at the end of the descaling process.
- Assign the task of descaling the boiler to the customer service, if necessary.

## 12 Maintenance



### **WARNING – Danger to life from electric shock**

- Work on the electrical system must only be conducted by qualified personnel who comply with the electrotechnical rules.
- Disconnect the machine from the power supply before removing any casing parts or working on the electrical system. To do this, turn the local main switch to **OFF** and ensure that it cannot be switched back on again.
- Attach all housing parts again before switching on the voltage again.



### **WARNING – Danger of injury when entering a danger zone**

- Only qualified personnel may work on the machine.
- Remove unauthorized persons from the danger zone.
- Block off the danger zone and mark it for third parties.
- Always wear cut-resistant protective gloves when removing casing parts or working inside the machine.



### **CAUTION – Danger of burns from hot wash water, hot washware and hot machine parts**

- Wear protective gloves, if necessary.
- Let the washware cool down before emptying, if necessary.
- Let the machine cool down before touching machine parts, if necessary.
- Never open the door during a wash cycle.
- Only open and close the door using the designated handle(s).



## **IMPORTANT**

### **Environmental damage due to improper disposal of liquids**

Environmentally hazardous liquids may be used during work on the machine. Improper disposal of these liquids can cause environmental damage.

- Always capture, store and transport liquids in suitable containers.
- Never mix liquids.
- Dispose of liquids properly in accordance with local requirements.

## **12.1 Maintenance work**



## **IMPORTANT**

Maintenance work must only be carried out by an authorized in-house technician or an authorized service technician.

MEIKO recommends having the machine serviced by an authorized service technician at least once a year and concluding a maintenance contract. As part of the maintenance, an electrical safety inspection is also carried out. Wear parts are checked and replaced, if necessary, and the machine is tested. Neglected or improper maintenance increases the residual risk of unforeseen damage to property and persons, for which no liability will be assumed.

Wear parts include, for example:

- Dosing hoses
- Door seal
- Supply water hose

## 12.2 Maintenance table

Maintenance work	Checked	Cleaned	Replaced	Maintenance requirement (minimum)
<b>1. Pumps</b>				
Check pumps for leaks and any visible damage				Once a year
Check pumps for running noise and correct function				Once a year
Check pump sieves for correct seating/function				Once a year
Check slide ring sealing/counter ring				Once a year
<b>2. Wash systems</b>				
Check water level in tank				Once a year
Check wash water pipe for leaks				Once a year
Check that wash arm is complete and generates correct spray pattern				Once a year
Check rotating arm hub				Once a year
<b>3. Fresh water final rinse</b>				
Check flow water pressure				Once a year
Check that rinse system is complete and generates correct spray pattern				Once a year
Check system for leaks				Once a year
<b>4. Casing and built-in components</b>				
Check casing parts and tank for damage and correct operation				Once a year
Check tank cover sieves				Once a year
Check boiler, hoses, clamps, plastic parts and seals				Once a year
<b>5. Fresh water installation</b>				
Check level control				Once a year
Check valves, clean dirt trap				Once a year
<b>For partial/full demineralization:</b> check function				Once a year
<b>With GiO-MODUL:</b> Carry out pre-filter change				Every 6 months
<b>6. Wastewater installation</b>				
Check for tightness				Once a year
For drain pumps, check pressure hose position and draining behavior				Once a year



Maintenance work				Checked	Cleaned	Replaced	Maintenance requirement (minimum)
<b>7. Electrical installation</b>							
Check all fuses							Once a year
Re-tighten all electrical connections							Once a year
Check tank and boiler heating							Once a year
Check temperature controller and limit switch							Once a year
<b>8. Electrical safety check (optional certificate)</b>							
Perform visual check							Once a year
Check protective conductor							Once a year
Measure insulation resistance							Once a year
Measure current on protective conductor							Once a year
<b>9. Detergent dosing</b>							
Check dosing and adjust, if necessary							Once a year
Replace peristaltic hose and associated seals on the nozzles							Once a year
Check detergent dosing system is working and not leaking							Once a year
<b>10. Rinse aid dosing</b>							
Check dosing and adjust, if necessary							Once a year
Replace peristaltic hose and associated seals on the nozzles							Once a year
Check rinse aid dosing system is working and not leaking							Once a year
<b>11. Test run with functional test of entire machine</b>							
Check test wash and rinse results							Once a year
Visually check entire machine for leaks							Once a year
<b>12. Water quality, temperature</b>							
Drinking water	°F	gpg	µS/cm				Once a year
Water quality after water treatment (if available)	°F	gpg	µS/cm				Once a year

## 13 Dismantling and disposal

In addition to valuable raw materials and recyclable materials, the packaging and the old machine may also contain substances that are harmful to health and the environment but were required for the function and safety of the old machine.

### 13.1 Disposal of packaging materials

All the packaging is made from recyclable materials. The following materials are used:

- Square timber frame
- Plastic sheeting (PE film)
- Foam material
- Cardboard packaging (edge protection)
- Packaging strap (steel strip)
- Packaging strap (plastic (PP))
- Transport safety bracket (stainless steel)



#### **Note**

The square timber frame consists of untreated raw pine/spruce wood. In order to guard against pests, country-specific import regulations may also stipulate the use of treated wood.

## 13.2 Dismantling and disposal of the old machine



### **WARNING – Risk of injury from contact with chemicals**

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use safety eyewear.
- Wear protective gloves.
- Do not mix different chemical products.

If applicable, wash machine components, containers, dosing units and hoses with fresh water to remove chemical residues. Wear suitable clothing (gloves, safety glasses) for this.



The machine is marked with this symbol. Please observe the local regulations for proper disposal of your old machine.

The components should be separated based on the material and recycled.

## 14 Index

### C

Change of products.....	18
Cleaning .....	50
Descaling .....	53
Interior .....	50
Surrounding area .....	52
Cleaning the interior.....	50
Cleaning the outer stainless steel surfaces .....	52
Cleaning the surrounding area ...	52
Code entry .....	47
Commissioning .....	31
Requirements.....	31
Connecting the detergent and rinse aid canisters.....	29
Connecting the dosing system....	28
Connection	
Fresh water .....	25
Wastewater pipe.....	26

### D

Delivery contents .....	5
Descaling .....	53
Designation .....	5
Detergent .....	17
Detergent and rinse aid .....	16
Dismantling .....	59
Dismantling and disposal .....	58
Disposal of packaging materials .	58
Disposal of the old machine.....	59
Dosing units .....	17

### E

Electrical installation.....	24
Electromagnetic compatibility.....	12

### F

Functional description .....	12
------------------------------	----

### G

Guarantee .....	7
-----------------	---

### I

Illustration .....	6
Installation .....	20, 23
Intended use .....	7

### L

Level 1 .....	47
Level 2.....	49

### M

Maintenance.....	55
Maintenance table .....	56
Malfunctions .....	41
Membrane keypad .....	14, 52
Messages .....	42
Misuse .....	8
Modifying the settings .....	47

### N

Noise emission .....	19
Notes on the operating instructions .....	5

## **O**

Operation/use .....	33
Overview illustration.....	13

## **P**

### **Parameters**

View .....	48
------------	----

Performing commissioning .....	31
--------------------------------	----

Preparation .....	33
-------------------	----

Priming the pipes .....	32
-------------------------	----

Product description .....	12
---------------------------	----

### **Program**

Assignment.....	16
-----------------	----

### **Programs**

FV 40.2/FV 40.2 G .....	15
-------------------------	----

## **R**

Related documents .....	5
-------------------------	---

Removing the rear panel .....	23
-------------------------------	----

Replacing the canisters .....	40
-------------------------------	----

Requirements for the electrical connection.....	22
--	----

Requirements for the fresh water connection.....	21
---	----

Requirements for the installation location.....	20
--	----

Requirements for the personnel .	11
----------------------------------	----

Requirements for the wastewater connection.....	21
--	----

Rinse aid .....	17
-----------------	----

## **S**

Safety .....	7
--------------	---

Safety information .....	8
--------------------------	---

Safety notices on the machine ....	10
------------------------------------	----

Safety symbols in the instructions.	7
-------------------------------------	---

Switching off .....	39
---------------------	----

Switching on .....	33
--------------------	----

## **T**

Technical data .....	19
----------------------	----

Terminating the installation .....	30
------------------------------------	----

Transport .....	19
-----------------	----

## **U**

Useful information for loading the washware .....	35
--	----

## **V**

Venting (priming) the pipes .....	48
-----------------------------------	----

Venting the pipes .....	32
-------------------------	----

## **W**

Wash programs .....	15
---------------------	----

### **Washing**

Selecting the wash program .....	36
----------------------------------	----

Starting the wash cycle .....	37
-------------------------------	----

Starting up the dishwasher .....	35
----------------------------------	----

Unloading the washware .....	38
------------------------------	----

Wastewater temperature control .	27
----------------------------------	----

What to do in the event of an emergency .....	10
--	----

## 15 Notes

A series of horizontal dotted lines for writing.





Scan QR code to access MEIKO U.S. ASA listings.  
ASA listing can also be accessed at  
[www.meiko.us](http://www.meiko.us)



**MEIKO Maschinenbau  
GmbH & Co. KG**

Englerstraße 3  
77652 Offenburg  
Germany  
[www.meiko-global.com](http://www.meiko-global.com)  
[info@meiko-global.com](mailto:info@meiko-global.com)

**MEIKO USA, Inc.**

1349 Heil Quaker Boulevard La  
Vergne, TN 37086  
Phone (615) 399-6600  
Toll Free (800) 55 MEIKO  
Fax (615) 399-6620  
[sales@meiko.us](mailto:sales@meiko.us)  
24H Toll Free Service +1 800 868  
3840  
[service@meiko.us](mailto:service@meiko.us)